

***Hustler® DASH
Parts Manual***



HUSTLER®

ENGINEERING PERFORMANCE™

200 South Ridge Road
Hesston, Kansas
67062

WARNING

The engine exhaust from this product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

NOTICE OF REQUIREMENT OF SPARK ARRESTER MUFFLER

This equipment may create sparks that can start fires around dry vegetation. California Public Resources Code Section 4442.6 provides that it is unlawful to use or operate an internal combustion engine on any forest-covered, brush-covered, or grass-covered land unless the engine is equipped with a spark arrester maintained in effective working order. A spark arrester is a device constructed of nonflammable materials specifically for the purpose of removing and retaining carbon and other flammable particles over 0.0232 of an inch in size from the exhaust flow of an internal combustion engine that uses hydrocarbon fuels or which is qualified and rated by the United States Forest Service. Other states or federal areas may have similar laws. The Operator Should Contact Local Fire Agencies For Laws or Regulations Relating to Fire Prevention Requirements. THIS EQUIPMENT DOES NOT HAVE A SPARK ARRESTER AND YOU SHOULD CONTACT YOUR AUTHORIZED DEALER FOR THE PURCHASE OF A SPARK ARRESTER.

Inspect spark arrester daily; replace every 500 hours or as needed.

The Engine Owner's Manual provides information regarding the U.S. Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance and warranty.

Keep Engine Owner's Manual with your unit. Should the Engine Owner's Manual become damaged or illegible, replace immediately. Replacements may be ordered per the information found in the Product Information section of the owner's manual.

Federal law and California State law prohibit the following acts or the causing thereof:

- 1. The removal or rendering inoperative by any person other than for purposes of maintenance, repair, replacement, of any device or element of design incorporated into any equipment for the purposes of emissions control prior to or after its sales or delivery to the ultimate purchaser or while it is in use, or**
- 2. The use of the equipment after such device or element of design has been removed or rendered inoperative by any person.**

Table of Contents

General Information

Service Literature	1-1
Options Available From Your Dealer.	1-1
Using This Manual	1-1
Hardware Description Codes & Abbreviations	1-2
Standard Torques	1-2

Section 2

Frame	2-2
Instrument Panel, Fenders, & Footrest.	2-4
Battery.	2-6

Section 3

Hydraulic Transmission Assembly (Briggs & Stratton)	3-2
Transmission Service Parts	3-4
Steering & Brake.	3-6

Section 4

Wheel & Tire	4-2
Front Wheel Breakdown	4-4
Drive Wheel Breakdown	4-6

Section 5

Engine.	5-2
Engine Service Parts.	5-4

Section 6

34" Service Deck.	6-2
34" Deck Pulleys & Spindles.	6-4
34" Deck	6-6
42" Service Deck.	6-8
42" Deck Pulleys & Spindles.	6-10
42" Deck	6-12
34/42" Deck Lift.	6-14

Section 7

Seat.	7-2
---------------	-----

General Information

*This manual covers Prod Desc® models: **938498, 938480, 939231, & 939249.***

Service Literature

PART NO.	DESCRIPTION
607203	OPERATOR'S MANUAL
124960	WARRANTY STATEMENT
124980	DEALER SET-UP INSTRUCTIONS
124589	GENERAL SERVICE MANUAL

Options Available From Your Dealer

PART NO.	DESCRIPTION
124643	LIGHT KIT
124646	ENGINE GUARD KIT
125033	MULCH KIT (34")
125031	MULCH KIT (42")
125029	STRIPE KIT
939298	SIDE CATCHER

***Note:** When ordering parts, you must use the part number as shown for each part, not the index number. Always give the model and serial number to your parts and service representative.*

***Note:** Items sold in bulk such as seals and hoses are sold by the foot.*

Using This Manual

This manual is part of a service package for the Hustler® mowers. Use of this manual in conjunction with other Hustler® mower and component manuals will provide the information necessary to service and maintain Hustler® mowers.

This Parts Manual provides a complete parts listing for the unit. Use this manual when ordering parts. Illustrations used were current at the time of printing, but subsequent production changes may cause your machine to vary slightly in detail. Excel Industries, Inc. reserves the right to redesign and change the machine as deemed necessary, without notification. If a change has been made to your machine which is not reflected in this parts manual, see your authorized dealer for current information and parts.

The Service Manual is a service guide for use by Service Technicians. It provides the necessary information needed to perform normal maintenance requirements on these units.

The Operator's Manual provides fundamental operational information and operational safety that is needed when operating the mower.

The component manuals are furnished by the various manufacturers to be used for the troubleshooting and servicing of their products.

Hardware Description Codes & Abbreviations

The following codes are used throughout this parts manual. Refer to this list when ordering parts.

ABBREVIATION	DESCRIPTION	ABBREVIATION	DESCRIPTION
CB	CARRIAGE BOLT	MB	MACHINE BUSHING
CE	CLEVIS PIN	MS	MACHINE SCREW
CN	CLIP NUT	NT	NUT
CP	COTTER PIN	SC	SELF TAPPING CAP SCREW
CS	CAP SCREW	SH	SOCKET HEAD
CW	CUP WASHER	SB	SHOULDER BOLT
FDRW	FENDER WASHER	SS	SET SCREW
FW	FLAT WASHER	OD	OUTSIDE DIAMETER
HX	HEX HEAD	ID	INSIDE DIAMETER
LW	LOCK WASHER	WN	WELD NUT

Standard Torques


The following chart lists the standard torque values for the threaded fasteners found in this manual. Torque all cap screws, nuts and set screws to these values unless a different torque is shown in the Notes section next to the fastener.

SIZE	FT-LBS	N•M	SIZE	FT-LBS	N•M
.250	8.2	11.1	M3	1	1.3
.312	17	23	M4	2.2	3
.375	30	40	M5	4.5	6.1
.438	48	65	M6	7.7	10.4
.500	73	99	M8	18.5	25
.562	105	143	M10	37	50
.625	145	200	M12	64	87
.750	260	350	M14	80	108.5
.875	420	565	M16	160	215
1.00	625	850	M20	320	435
			M24	555	750

Section 2

Frame	2-2
Instrument Panel, Fenders, & Footrest	2-4
Battery	2-6

Frame

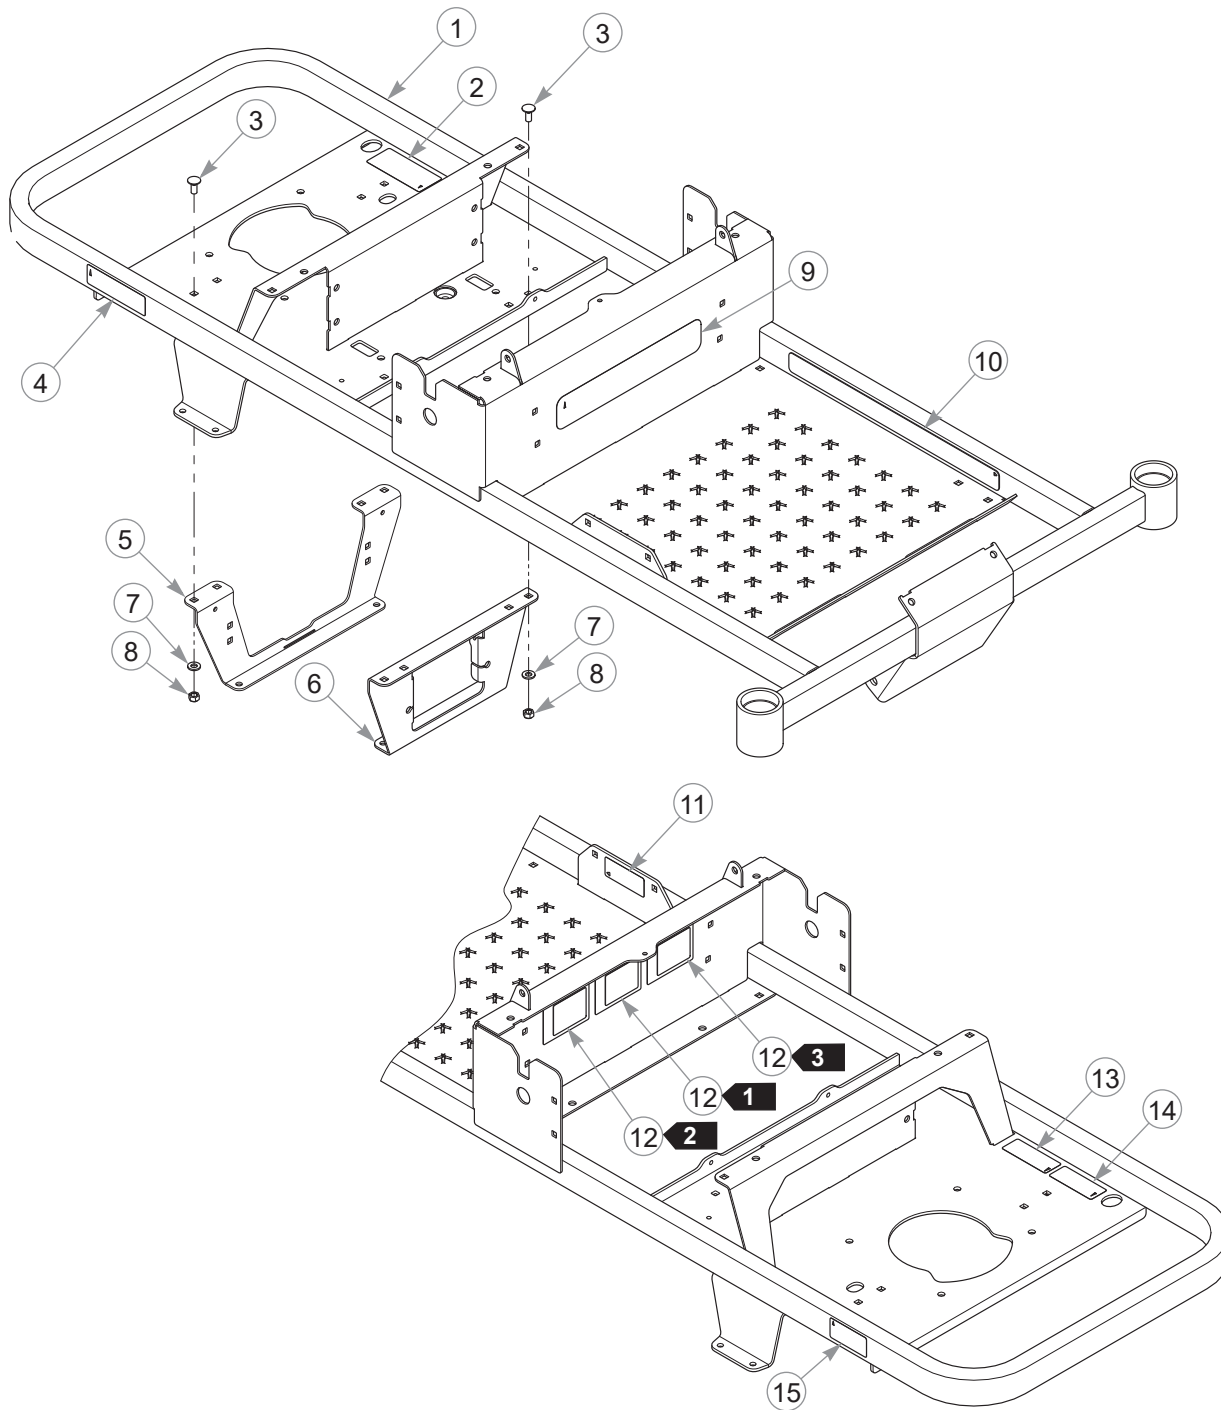


Frame

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	554824	1	FRAME (WITH DECALS)
2	601967	1	ENGINE COMPARTMENT DECAL
3	016253	6	CB .312-18 X .75 FUL ZN
4	607289	1	GAS TANK WARNING DECAL
5	124625-1	1	TRANSMISSION BRACKET, REAR
6	124624-1	1	TRANSMISSION BRACKET, FRONT
7	768523	6	FW .343 X .687 X .051/.080H
8	058776	6	NT .312-18 HX G5 ZY NL
9	607067	1	DASH ID DECAL
10	601981	1	SAFE OPERATION DECAL
11	605685	1	DECK HEIGHT DECAL
12	N/A	3	SERIAL NUMBER / SPEC DECAL
13	607296	1	REMOVE FUEL CAP DECAL
14	607086	1	LEVEL DECAL
15	602041	1	HOT DECAL

NOTES:

1. Serial number decal. In the event the serial number decal becomes damaged or illegible, please contact your dealer to order a replacement.
2. EPA compliance decal.
3. Patent numbers decal.

Instrument Panel, Fenders, & Footrest

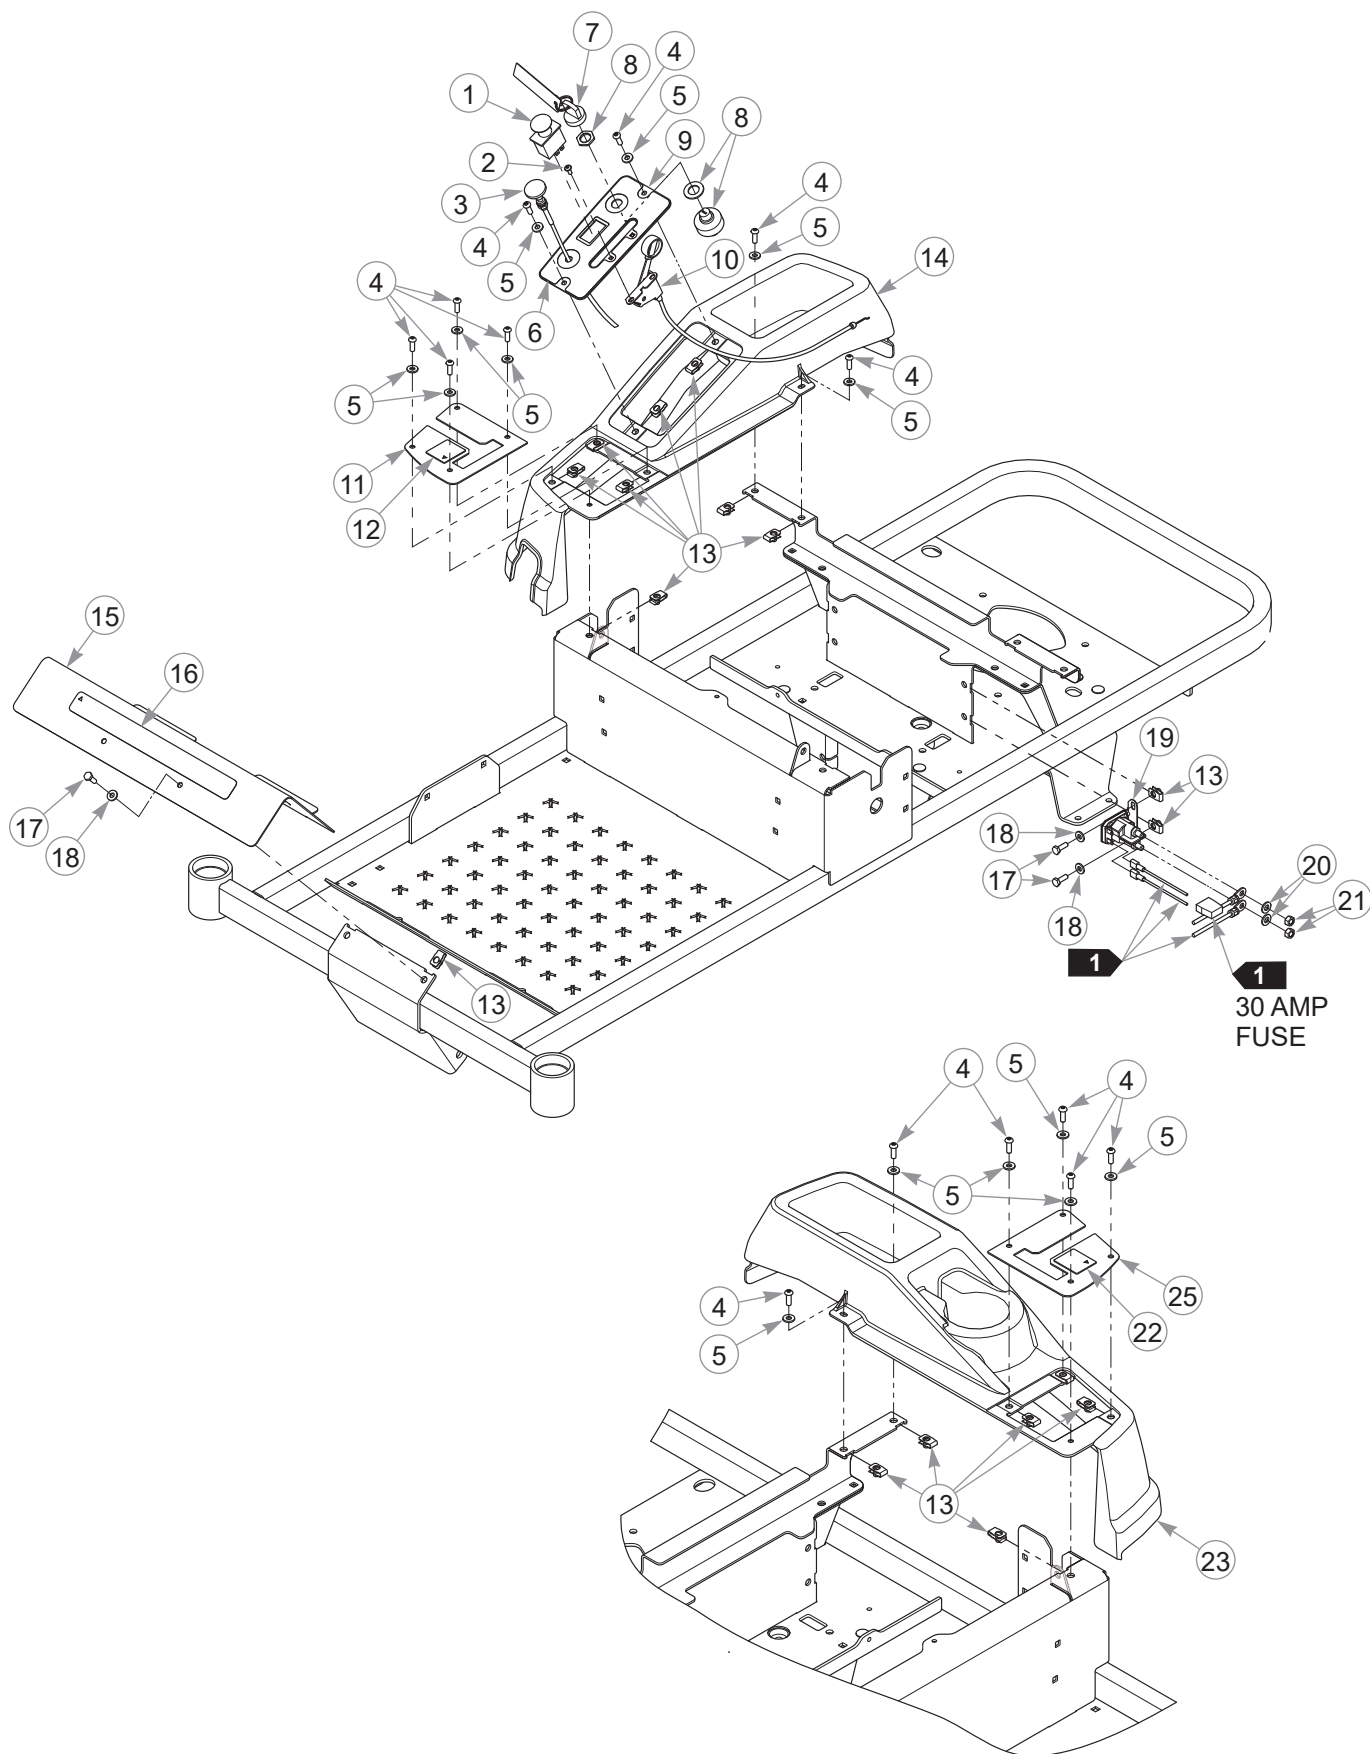



Instrument Panel, Fenders, & Footrest

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	776476	1	PTO SWITCH
2	606851	2	CS 10-24X .500 PH SH ZN
3	607056	1	CHOKE CABLE, 26.5
4	605473	14	CS .25-20 BH TX BZ
5	605628	14	FW .281 X .625 X .066
6	607065	1	INSTRUMENT PANEL DECAL
7	785808	1	KEY ASSEMBLY
8	045898	1	IGNITION SWITCH
9	554826	1	INSTRUMENT PANEL (WITH DECAL)
10	607057	1	THROTTLE CABLE
11	554827	1	RS STEERING PLATE (WITH DECAL)
12	785220	1	RS STEERING DECAL
13	601982	18	CN .250-20 X .15 MAX THK
14	607063	1	RS FENDER
15	554829	1	FOOTREST (WITH DECAL)
16	607326	1	HUSTLER ID DECAL
17	055939	4	CS .250-20 X .75 HX G5
18	768515	4	FW .281 X .625 X .066
19	606445	1	STARTER SOLENOID
20	768523	2	FW 0.343 SAE
21	041152	2	NT .312-24 HX ZN YC
22	785139	1	LS STEERING DECAL
23	607064	1	LS FENDER
24	607085	1	WIRE HARNESS (NOT SHOWN)
25	554828	1	LS STEERING PLATE (WITH DECAL)

NOTES:

1. Part of the wire harness.

Battery

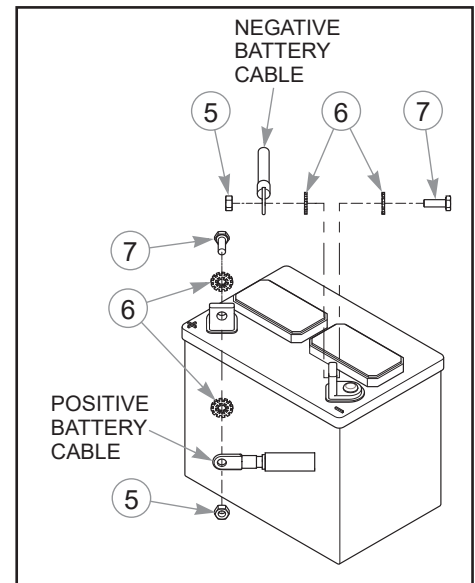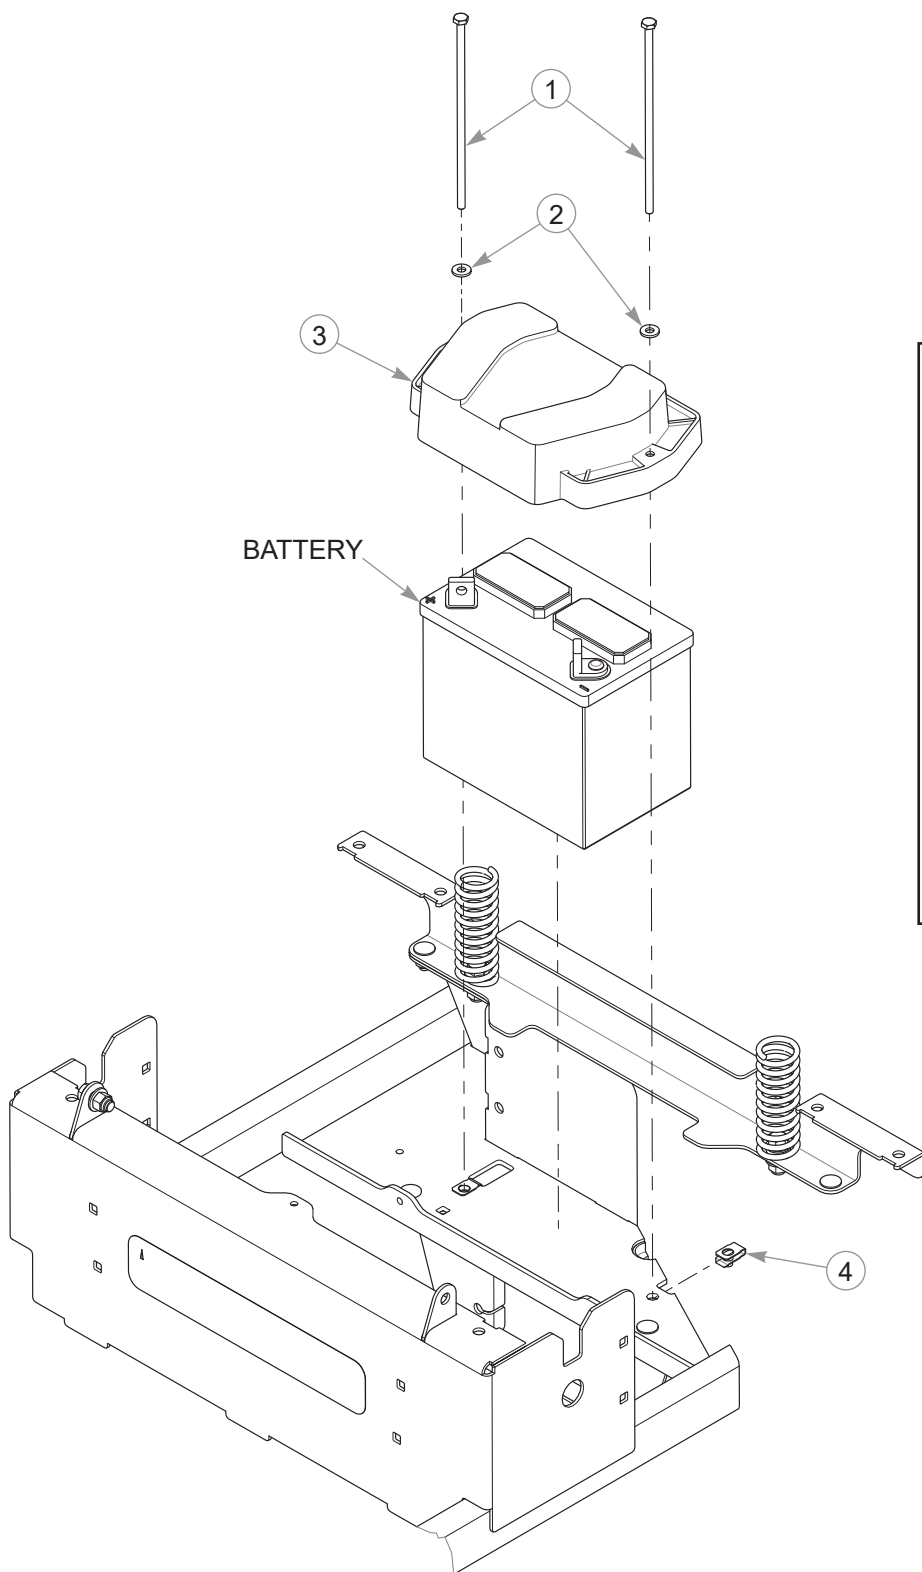

Battery

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	604465	2	CS .250-20 X 7.50 HX G5
2	768515	2	FW .281 X .625 X .066
3	607066	1	BATTERY COVER
4	601982	2	CN .250-20 X .15 MAX THK
5	024927	2	NT .250-20 HX G5
6	029868	4	LW .250 INT-EXT TOOTH Z
7	055939	2	CS .250-20 X .75 HX G5


NOTES:

1. When performing service on the mower, disconnect the negative battery cable (black) and do not reconnect it to the battery until ready to start the engine.

Section 3

Hydraulic Transmission Assembly (Briggs & Stratton)	3-2
Transmission Service Parts	3-4
Steering & Brake	3-6

Hydraulic Transmission Assembly (Briggs & Stratton)

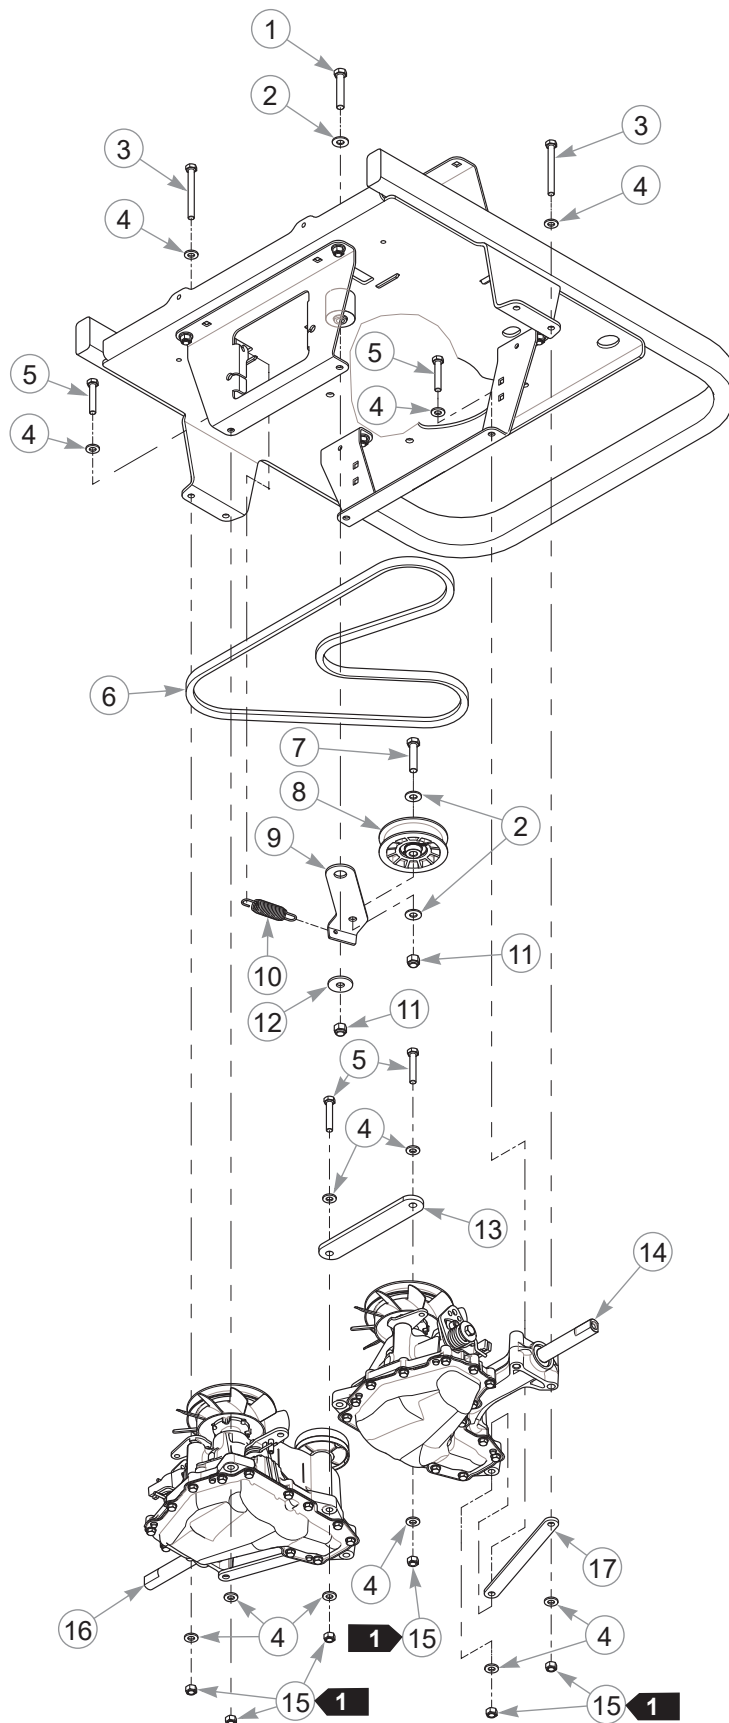


Hydraulic Transmission Assembly (Briggs & Stratton)

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	016410	1	CS .375-16 X 2.00 HX G5
2	767954	3	FW .379 X .813 X .063
3	043067	4	CS .312-18 X 3.00 HX G5 Z
4	768523	20	FW .343 X .687 X .051/.080H
5	050161	6	CS .312-18 X 1.75 HX G5
6	606997	1	BELT, A 56.0 EL
7	705160	1	CS .375-16 X 1.625 HX G5
8	607163	1	PULLEY
9	124545-4	1	TENSIONER ARM
10	607201	1	SPRING
11	086660	2	NT .375-16 G8 NL
12	712893	1	FW .406 X 1.25 X .12 HRD Z
13	124641-1	1	CROSS BRACE
14	606995	1	LS TRANSMISSION
15	058776	10	NT .312-18 HX G5 ZY NL
16	606994	1	RS TRANSMISSION
17	125017-1	2	LINK

NOTES:

1. Torque to 17 ft-lbs.

Transmission Service Parts

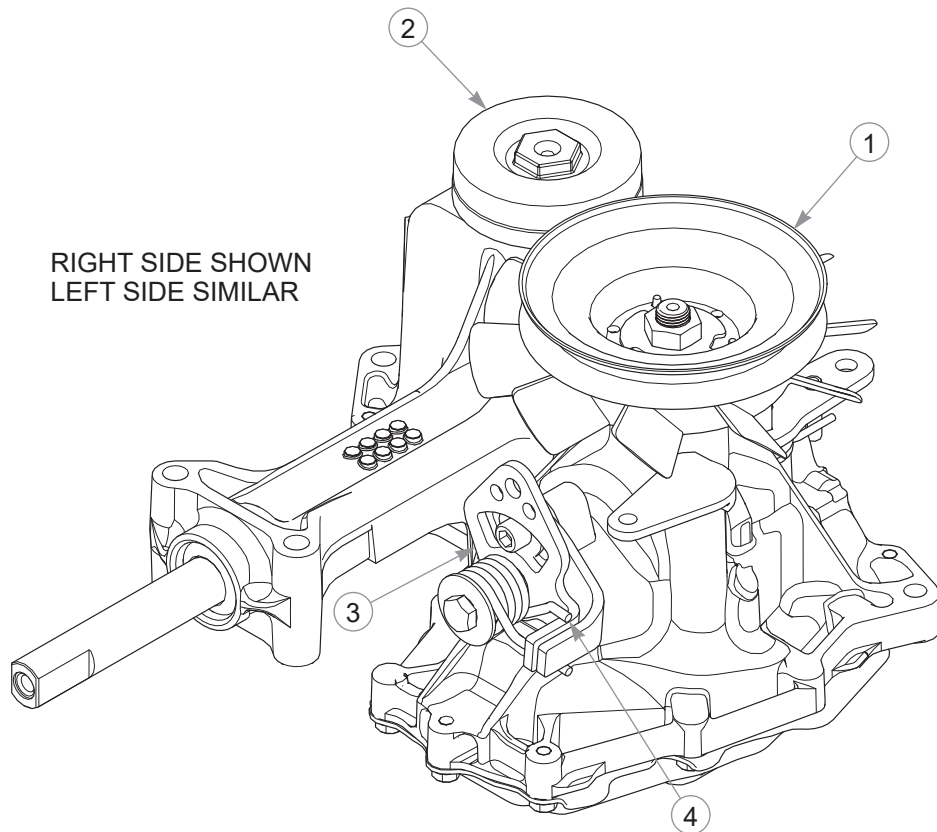

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	607128	1	FAN/PULLEY KIT
2	607131	1	BREATHER ASSEMBLY
3	607129	1	RTN KIT
4	607130	1	RTN SPRING

NOTES:

This page intentionally left blank.

LEFT SIDE SHOWN
RIGHT SIDE SIMILAR

FRONT OF
MOWER

STEERING COVER

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34

Steering & Brake

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	607069	2	STEERING BAR
	781260	2	GRIP STEERING BAR
2	767954	14	FW .379 X .813 X .063
3	036244	4	CS .375-16 X 1.00 HX G5
4	607073-4	2	STEERING ARM
5	056036	2	CS .375-16 X 2.25 HX G5
6	606575	2	SAFETY CLIP
7	023655	4	NT .312-24 HX G5 NL
8	041152	6	NT .312-24 HX ZNYC
9	116144	2	STEERING BUSHING
10	607081-4	2	STEERING ROD
11	124628-3	2	STEERING LINK
12	086660	4	NT .375-16 G8 NL
13	607076	2	STEERING BLOCK A
14	607078	4	STEERING BUSHING
15	607077	2	STEERING BLOCK B
16	058776	14	NT .312-18 HX G5 ZY NL
17	124621-3	1	LS BRAKE LINK
18	768523	22	FW .343 SAE
19	604179	2	BRAKE ROD
20	606262	2	SWITCH
21	016444	2	CS .375-16 X 3.00 HX G5
22	016253	8	CB .312-18 X .75 FUL ZN
23	124619-3	1	LS STEERING BRACKET
24	124620-3	1	RS STEERING BRACKET
25	124622-3	1	RS BRAKE LINK
26	124636-1	1	BRAKE CABLE BRACKET
27	600899	1	PUMP BELT WARNING DECAL
28	607084	2	BRAKE CABLE
29	765339	4	BUSHING
30	808493	2	RIVET NUT, 3/6-16
31	706168	2	NT .375-24 HX JAM G5 ZN
32	604365	2	CS .375-12 X 1.50 HX G5
33	036236	2	CS .312-18 X 1.00 HX G5
34	768788	2	ROD END


NOTES:

1. Torque to 14 ft-lbs.

Section 4

Wheel & Tire	4-2
Front Wheel Breakdown	4-4
Drive Wheel Breakdown	4-6

Wheel & Tire

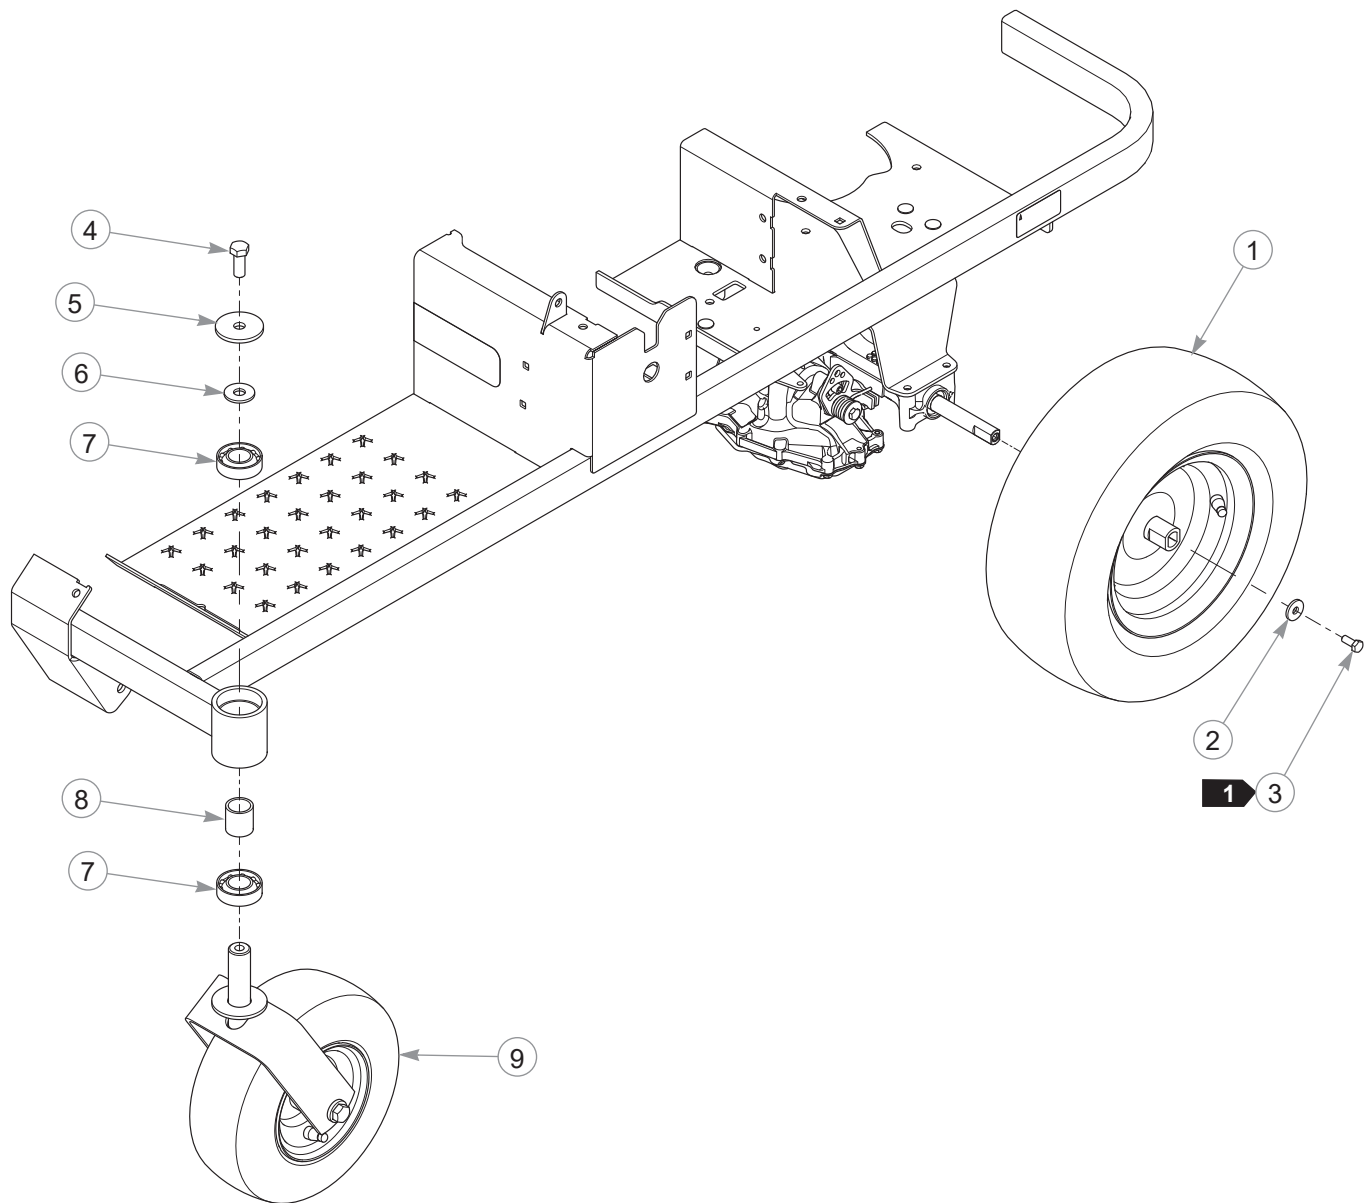


Wheel & Tire

INDEX NO.	PART NO.	QTY	DESCRIPTION
1	606988	2	TIRE/WHEEL ASSY 16 X 6.50-8 (34" MOWERS)
	606987	2	TIRE/WHEEL ASSY 16 X 6.50-8 (42" MOWERS)
2	712927	2	FW .344 X 1.00 X .12 HRD Z
3	606989	2	CS .312-24 X .750 HX G5
4	705954	2	CS .500-13 X 1.25 HX G5
5	344267	2	FW .510 X 2.15 X .187 SPL
6	712976	2	FW .531 X 1.375 X .125
7	784223	4	BEARING
8	784603	2	SPACER
9	N/A	2	FRONT TIRE S/A

NOTES:

1. Torque to 17 ft-lbs.

Front Wheel Breakdown

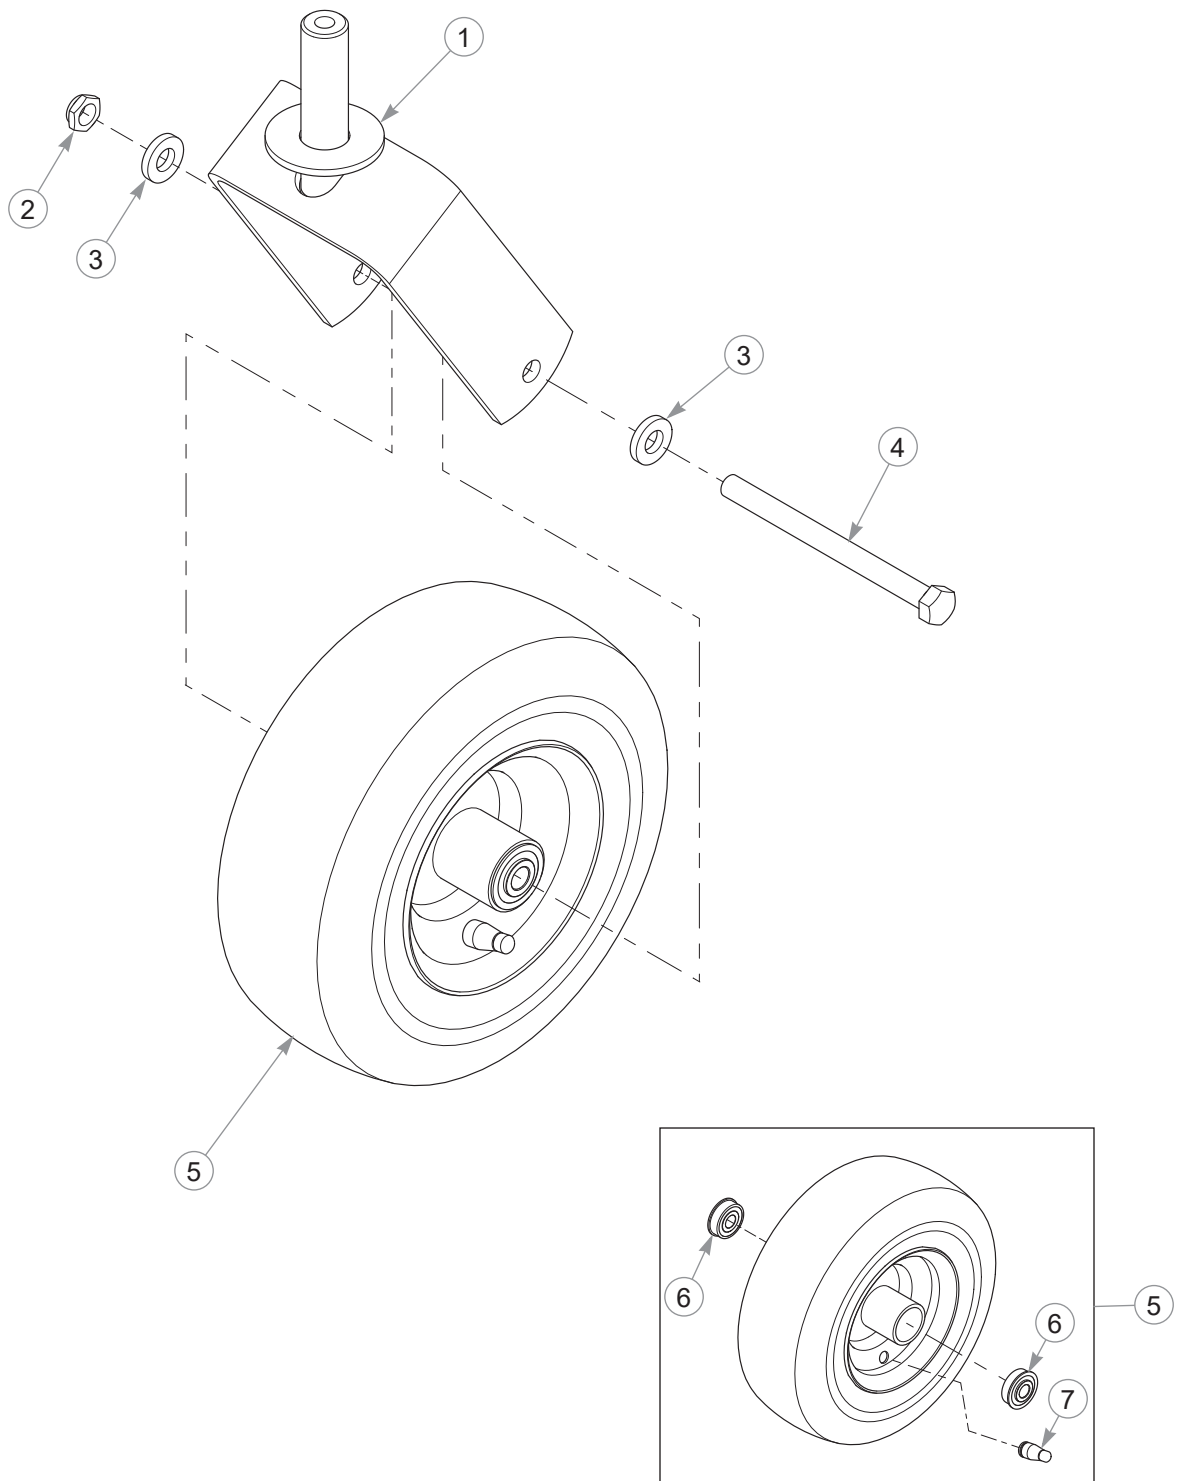


Front Wheel Breakdown

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	110116	1	CASTER FORK
2	707398	1	NT .500-13 JAM NY LK
3	767962	2	FW .531 X 1.063 X .137
4	604718	1	CS .500-13 X 6.00 HX G5
5	607009	1	TIRE/WHEEL ASSEMBLY 11 X 4
6	607026	2	SEALED BALL BEARING
7	019521	1	VALVE STEM

NOTES:

Drive Wheel Breakdown

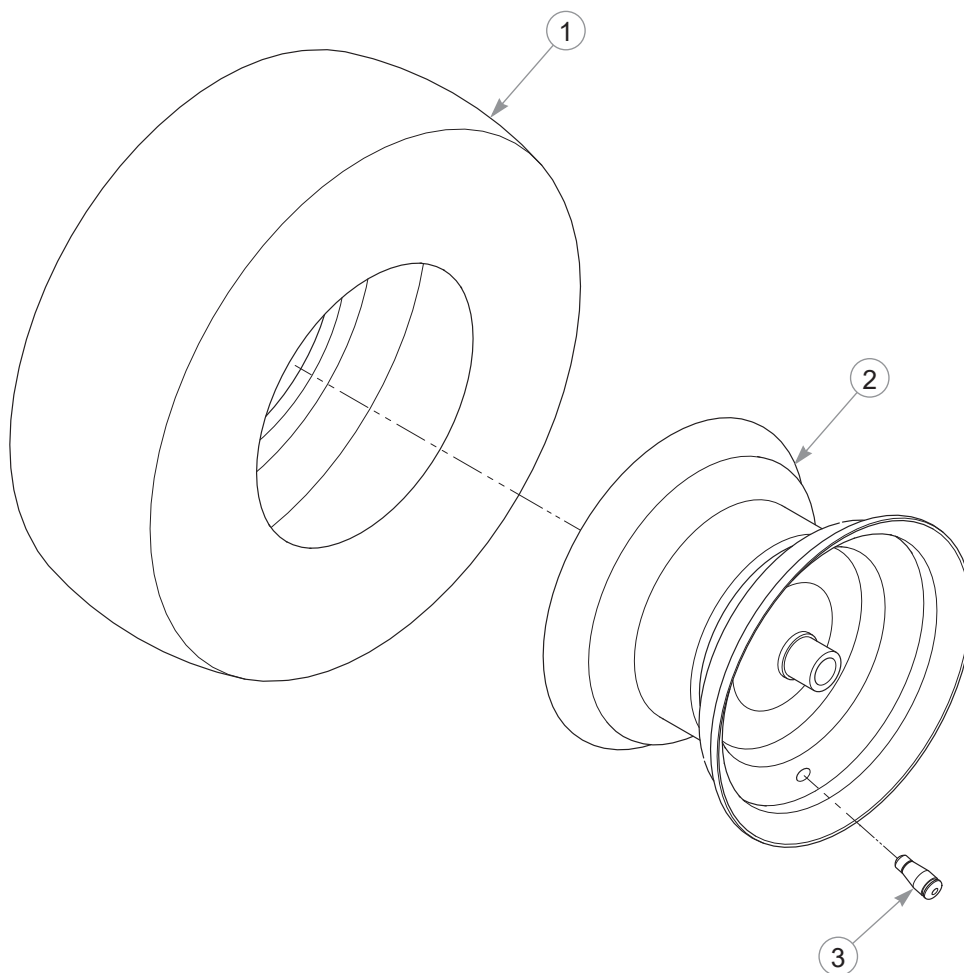




INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	607000	1	TIRE, 16 X 6.50-8
2	606998	1	WHEEL, 8 X 5.38
3	019521	1	VALVE STEM

NOTES:

Section 5

Engine	5-2
Engine Service Parts	5-4

Engine

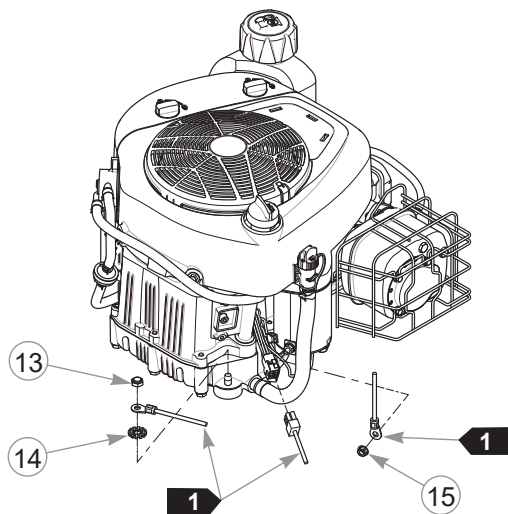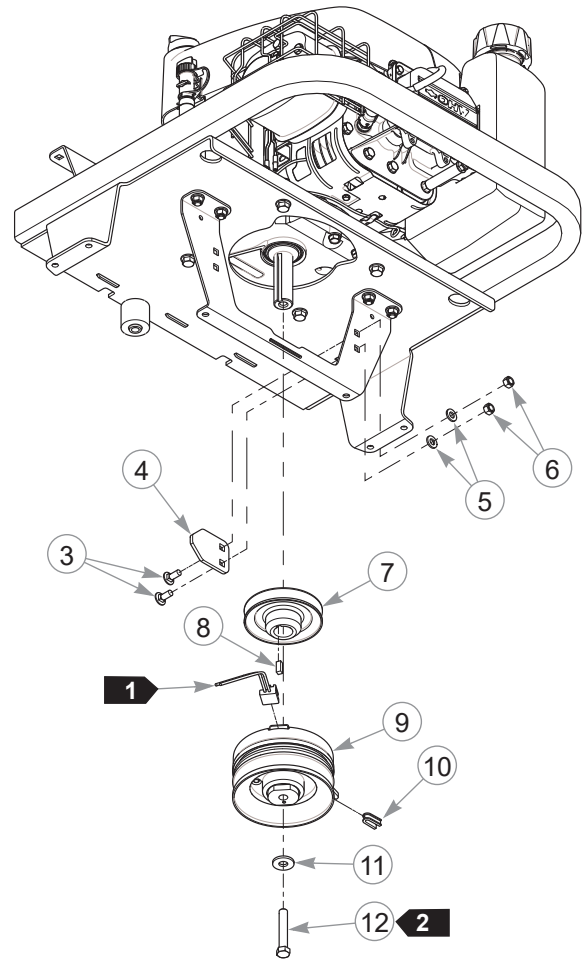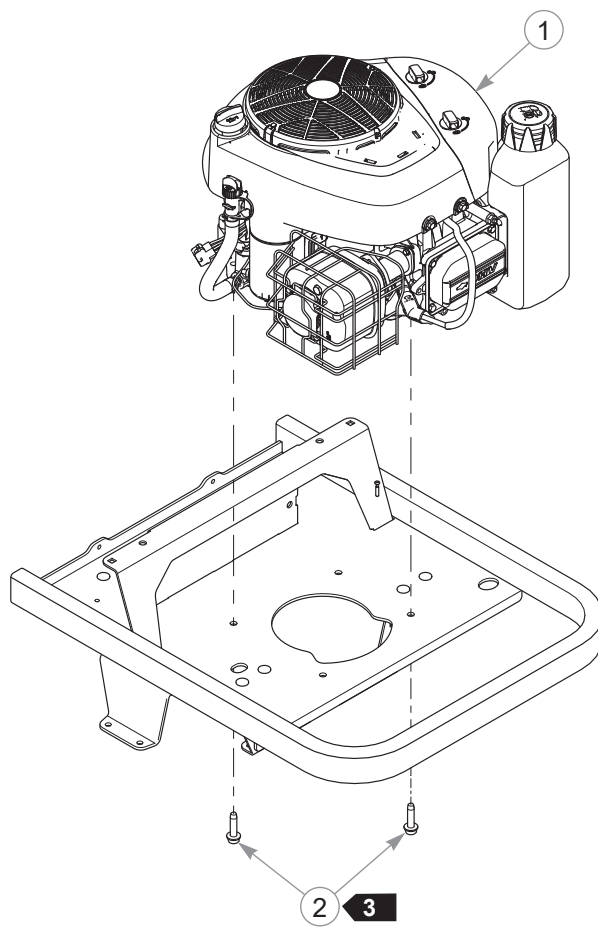


Engine

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	N/A	1	ENGINE, BRIGGS 10.5 HP
2	605997	4	SC 0.375-16 X 1.500 FLG
3	016253	2	CB .312-18 X .75 FUL ZN
4	124547-1	1	CLUTCH ANCHOR
5	768523	2	FW .343 X .687 X .051/.080H
6	058776	2	NT .312-18 HX G5 ZY NL
7	607005	1	PULLEY
8	712372	1	KEY 1/4 SQ X .66 LG
9	606996K	1	CLUTCH KIT
10	607232	1	CLUTCH ANCHOR BUSHING
11	602680	1	FW .453 X 1.12 X .119 HRD
12	785659	1	CS .437-20 X 2.50 HX G5 P85
13	603846	1	NT .375-16 HX NL JAM ZN
14	793885	1	LW .375 INT-EXT TOOTH
15	016816	1	NT .250-20 HX FL LK ZNY

NOTES:

1. Part of the wire harness.
2. Torque to 45–48 ft-lbs. Replace (do not reuse) the cap screw if it is removed or loosened. Use only hand tools to install this fastener.
3. Torque to 30 ft-lbs.

Engine Service Parts

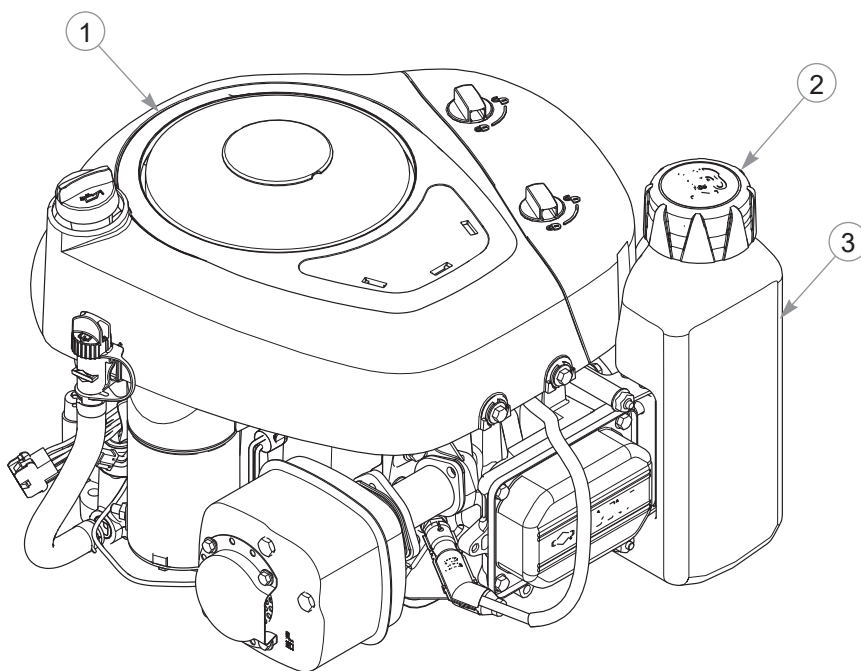


INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	607136	1	AIR CLEANER ELEMENT
2	607156	1	FUEL CAP
3	607155	1	FUEL TANK ASSEMBLY (WITH CAP)

NOTES:

Section 6

34" Service Deck	6-2
34" Deck Pulleys & Spindles	6-4
34" Deck	6-6
42" Service Deck	6-8
42" Deck Pulleys & Spindles	6-10
42" Deck	6-12
34/42" Deck Lift	6-14

34" Service Deck

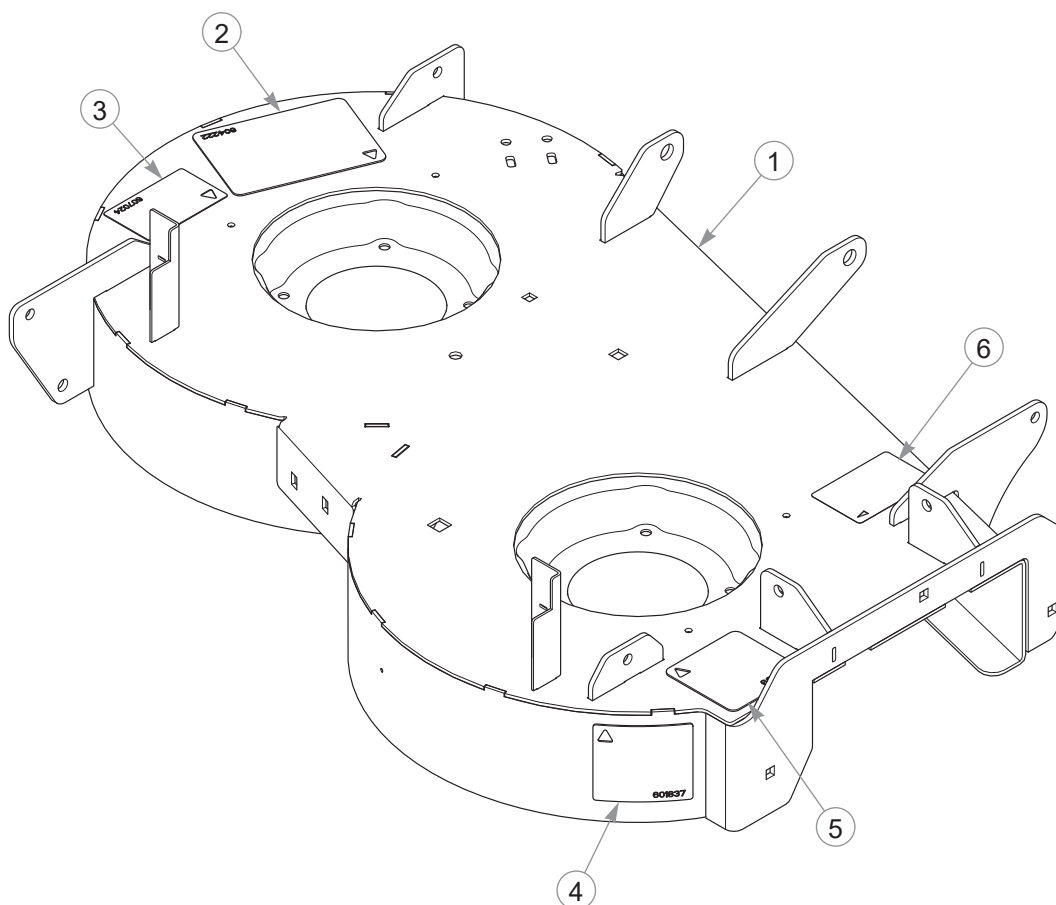


INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	554913	1	34" DECK (WITH DECALS)
2	604222	1	DANGER/OBJECTS DECAL
3	607024	1	ID DECAL, 34" DECK
4	601837	1	DECK DANGERS DECAL
5	607316	1	DANGER/CHUTE DECAL
6	602243	1	BELT ROUTING DECAL

NOTES:

This page intentionally left blank.

34" Deck Pulleys & Spindles

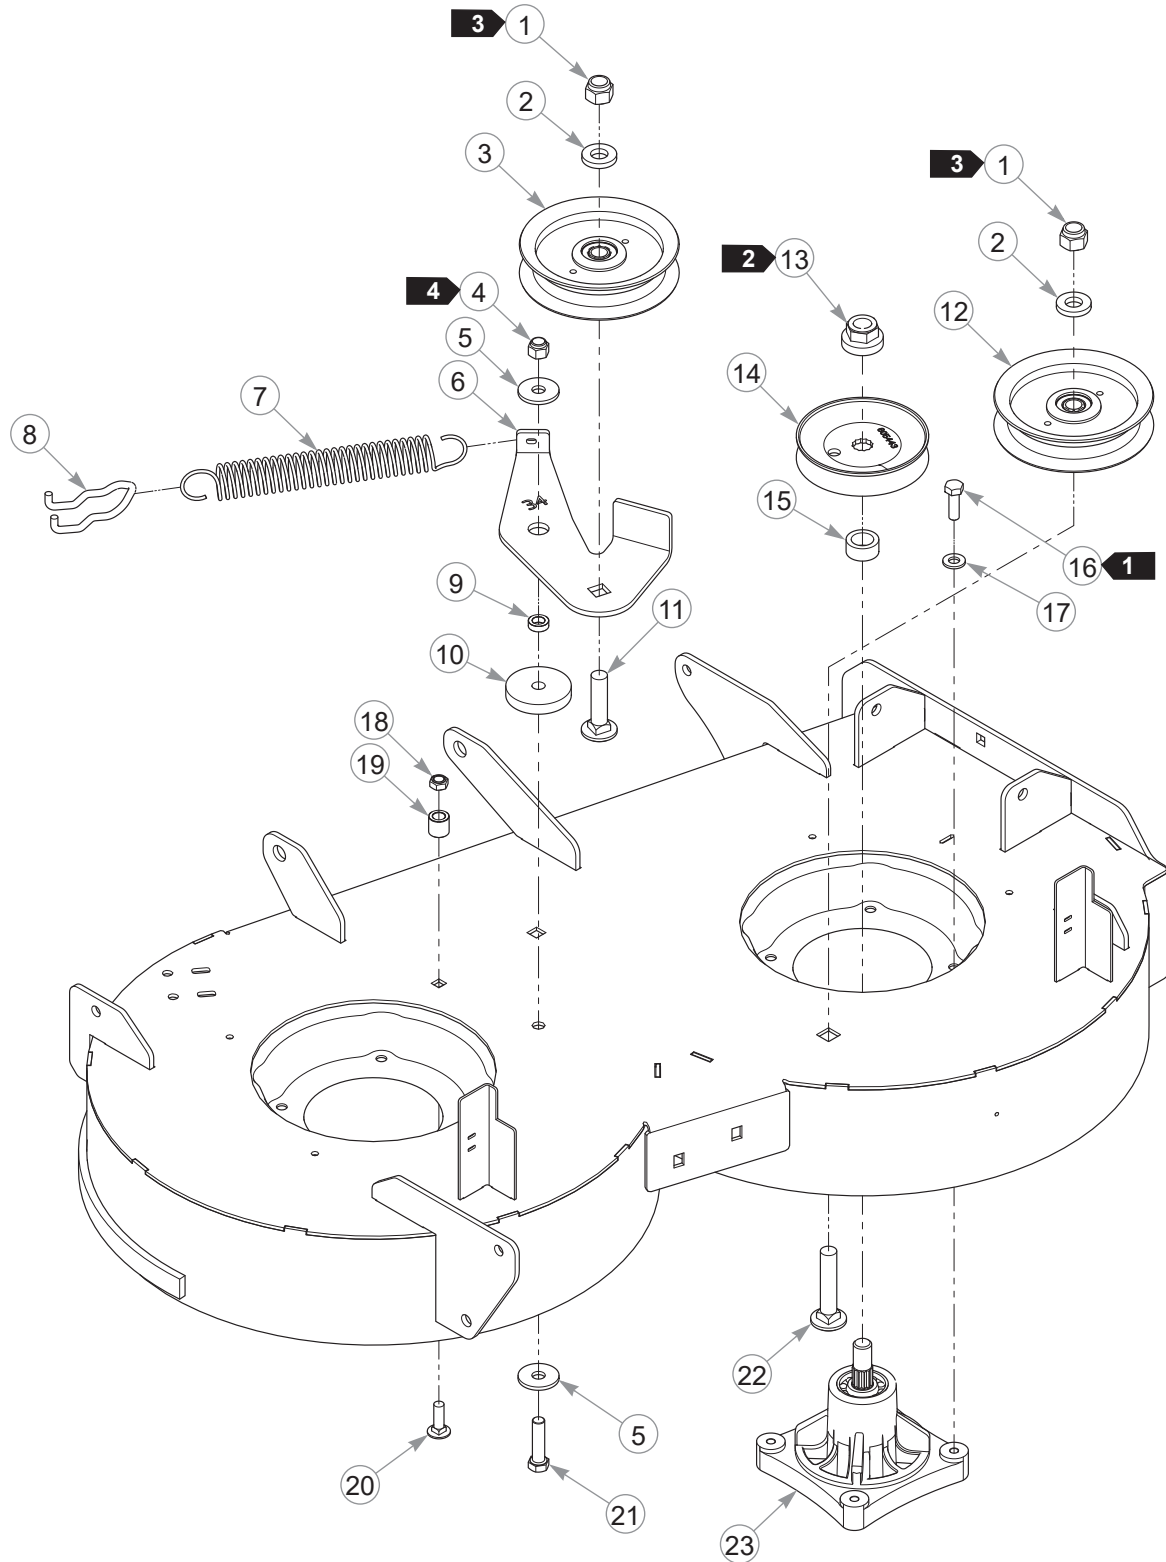


34" Deck Pulleys & Spindles

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	781567	2	NT .500-13 NL
2	767962	2	FW .531 X 1.063 X .175
3	603986	1	IDLER PULLEY, 4.00" FLAT
4	086660	1	NT .375-16 G5 NL
5	712893	2	FW .406 X 1.25 X .12 HRD Z
6	124955-4	1	IDLER ARM
7	605379	1	IDLER SPRING
8	604110	1	SPRING TENSIONER ANCHOR
9	601839	1	PIVOT SPACER BUSHING
10	117539	1	SPACER
11	604253	1	CB .50-13 X 2.00 STD ZN
12	604219	1	IDLER PULLEY, 4.00" FLAT
13	606943	2	NT .562-18 HX G5 NL
14	605443	2	PULLEY
15	604123	2	PULLEY SPACER
16	036236	8	CS .312-18 X 1.00 HX G5
17	768523	8	FW .343 X .687 X .051/.080H
18	604251	1	NT .312-18 HX NL JAM G2 ZN
19	122398	1	TENSIONING PULLEY STOP
20	037887	1	CB .312-18 X 1.00 FULL ZN
21	080655	1	CS .375-16 X 1.50 HX G5
22	604254	1	CB .50-13 X 2.50 STD ZN
23	604214	2	SPINDLE ASSEMBLY

NOTES:

1. Torque to 18 ft-lbs.
2. Torque to 75 ft-lbs.
3. Torque to 73 ft-lbs.
4. Torque to 30 ft-lbs. The idler arm must pivot freely.

34" Deck

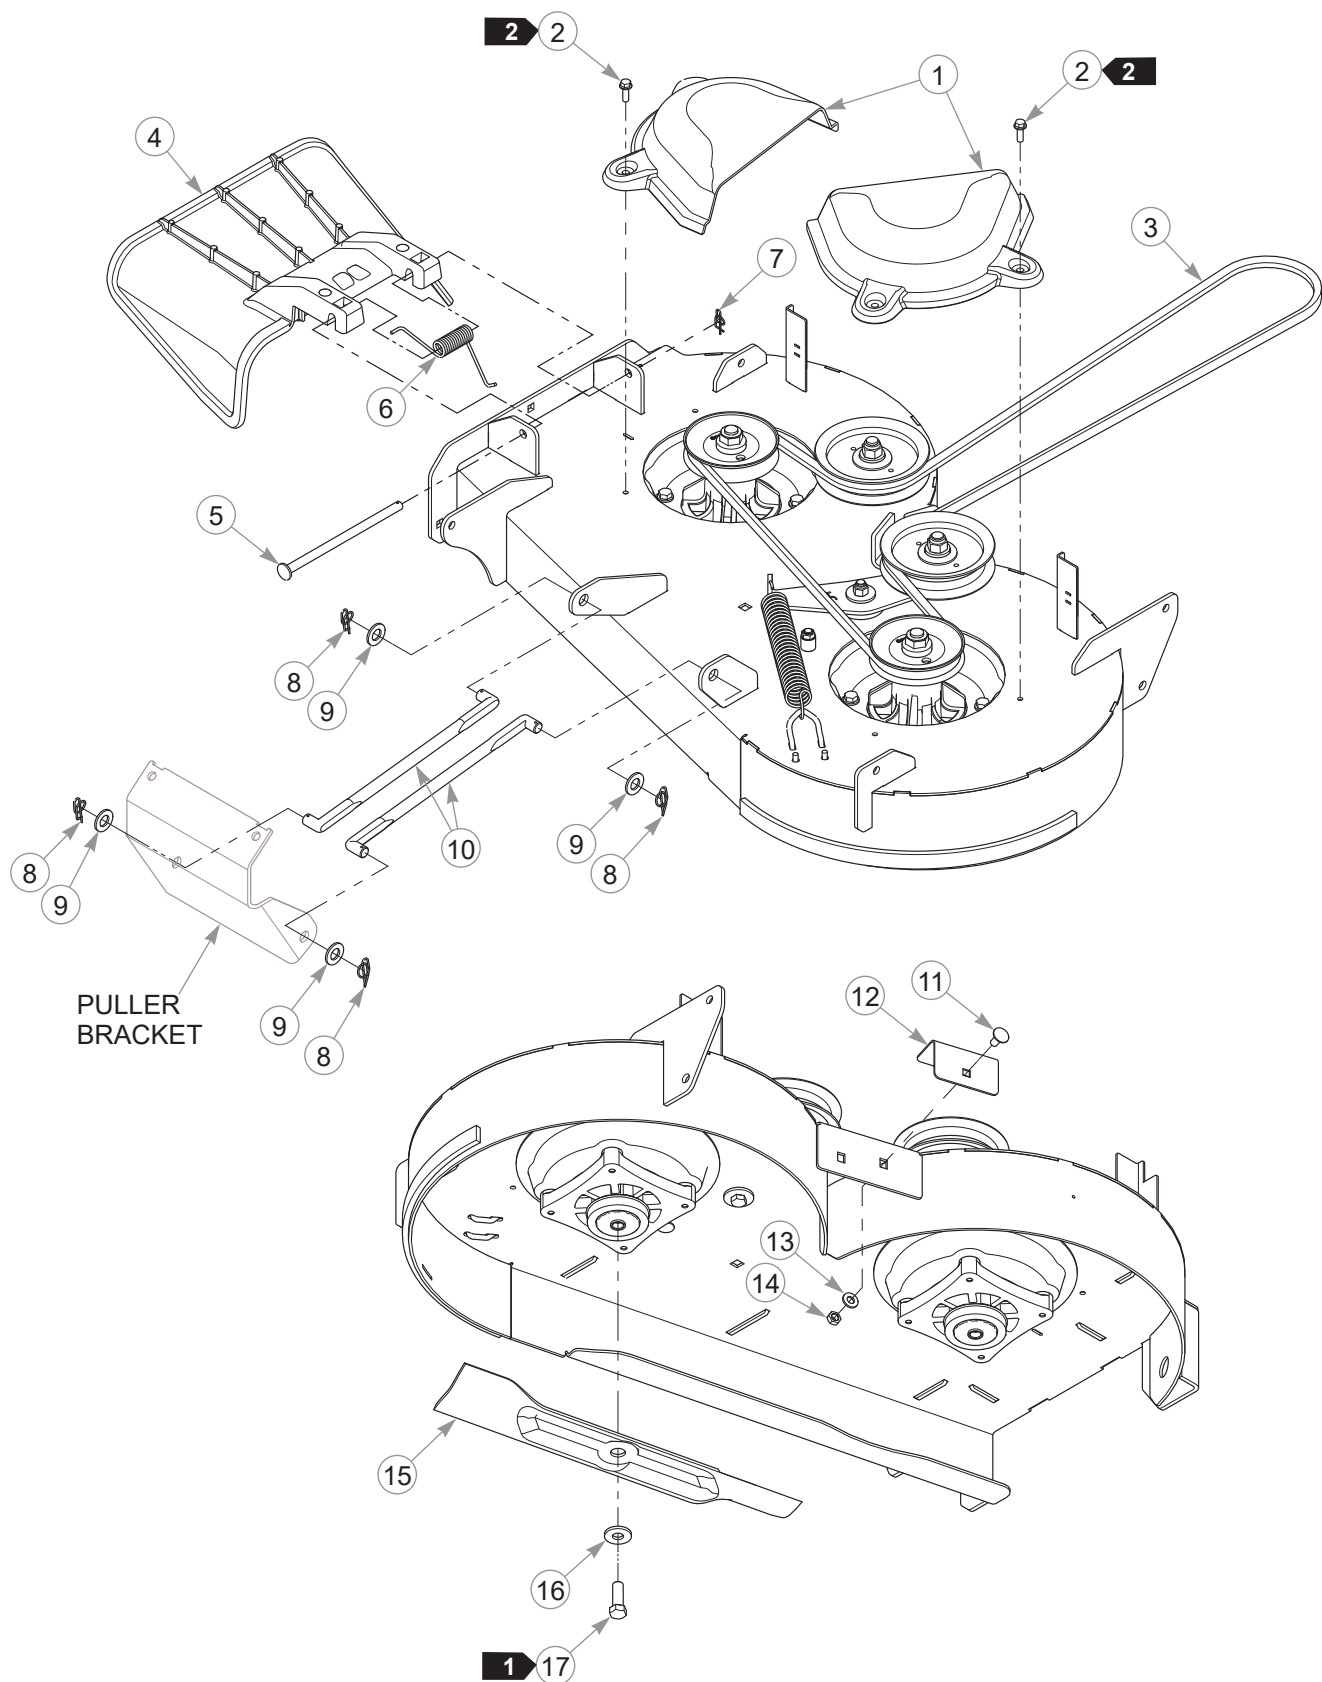


34" Deck

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	604403	2	PULLEY COVER
2	604324	4	CS .250-20 X .75 HX FLG
3	607058	1	BELT, A-SEC
4	607145	1	DISCHARGE CHUTE
5	607157	1	DISCHARGE CHUTE PIN
6	607146	1	CHUTE SPRING
7	607093	1	CP RUE RING .054 X .392
8	607051	4	CP RUE RING .062 X .520
9	004168	4	FW .500 X 1.06 X .090 SAE
10	607016	2	DECK PULLER
11	083147	1	CB .312-18 X .620 G5 ZN
12	607262-4	1	WEAR PLATE
13	768523	1	FW 0.343 SAE
14	604251	1	NT .312-18 HX NL JAM G2 ZN
15	607281	2	BLADE, 16.75"-M-F-CW
16	602680	2	FW .453 X 1.12 X .119 HRD
17	754101	2	NT .312-18 LOW CROWN AC

NOTES:

1. Torque to 48 ft-lbs.
2. Torque to 2–5 ft-lbs on these 2 self-tapping screws.

42" Service Deck

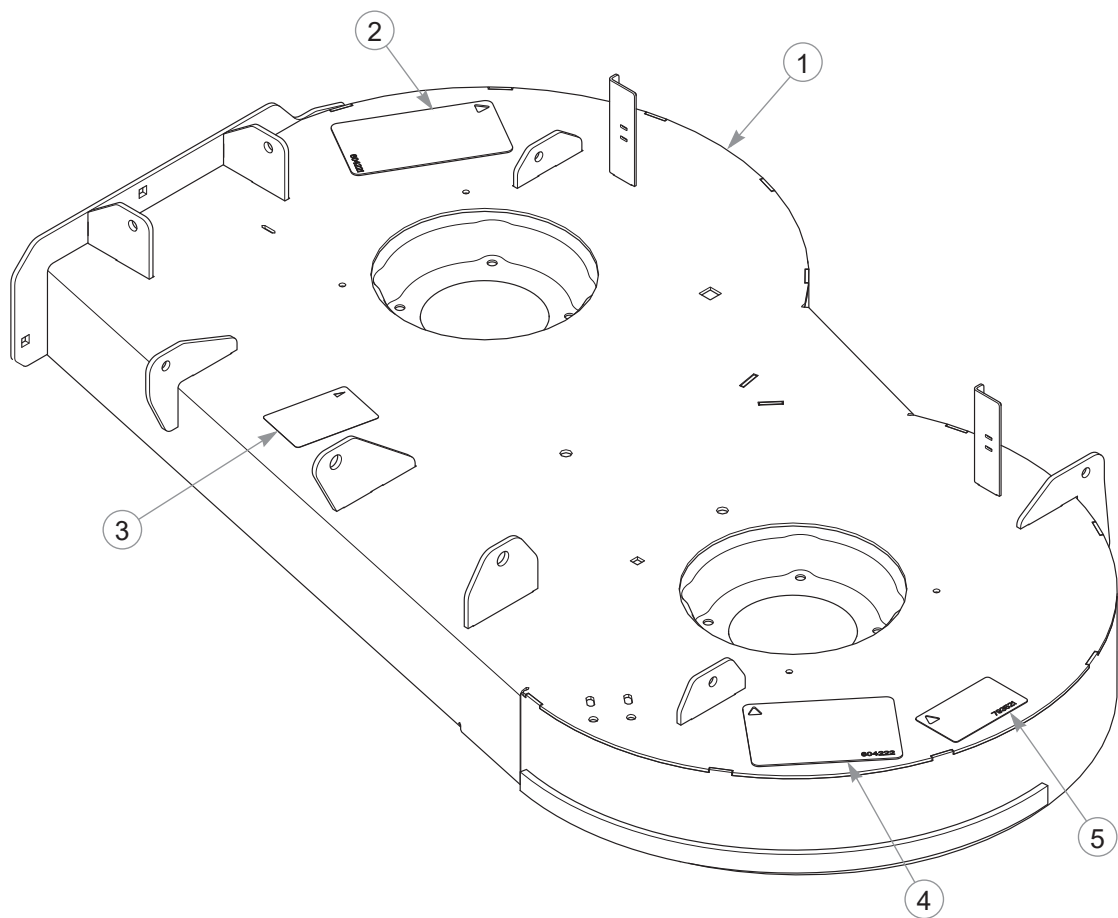


INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	554912	1	42" DECK (WITH DECALS)
2	604221	1	DANGER/CHUTE DECAL
3	602243	1	BELT ROUTING DECAL
4	604222	1	DANGER/OBJECTS DECAL
5	793521	1	ID DECAL, 42" DECK

NOTES:

This page intentionally left blank.

42" Deck Pulleys & Spindles

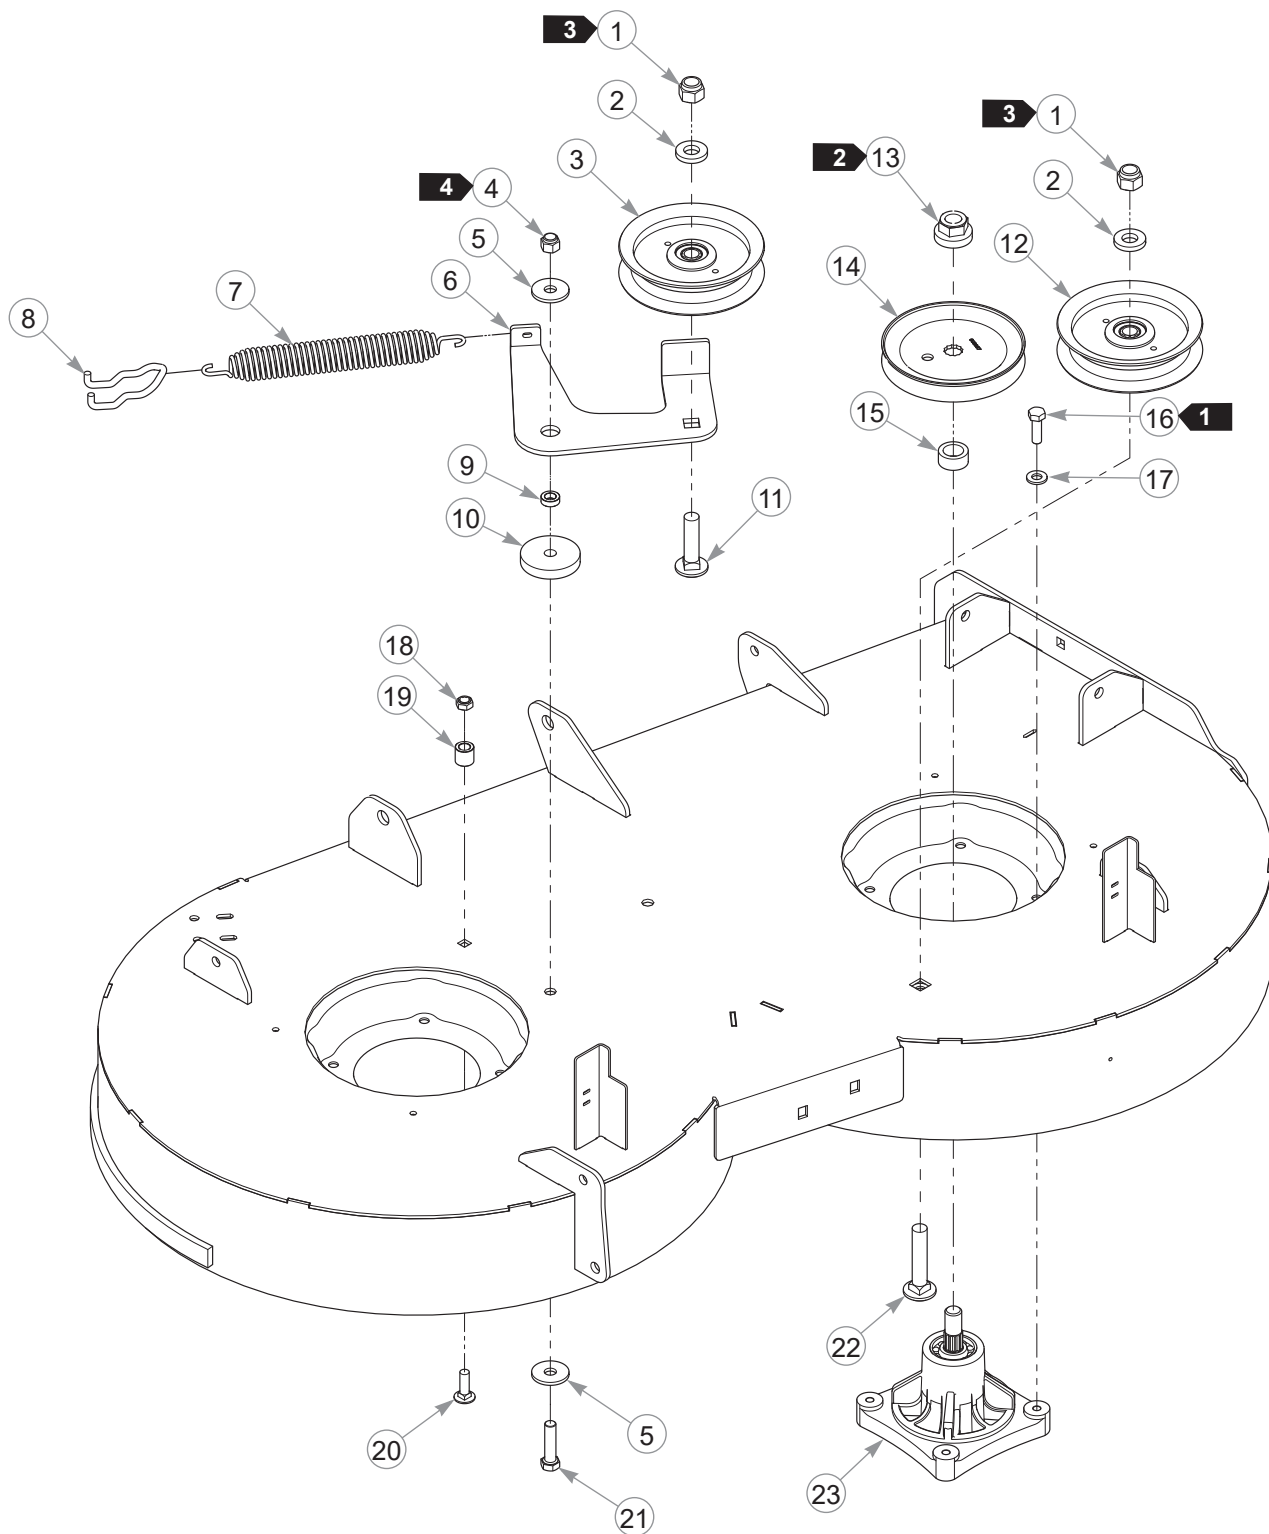


42" Deck Pulleys & Spindles

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	781567	2	NT .500-13 NL
2	767962	2	FW .531 X 1.063 X .175
3	603986	1	IDLER PULLEY, 4.00" FLAT
4	086660	1	NT .375-16 G5 NL
5	712893	2	FW .406 X 1.25 X .12 HRD Z
6	117512	1	IDLER ARM
7	122388	1	IDLER SPRING
8	604110	1	SPRING TENSIONER ANCHOR
9	601839	1	PIVOT SPACER BUSHING
10	117539	1	SPACER
11	604253	1	CB .50-13 X 2.00 STD ZN
12	604219	1	IDLER PULLEY, 4.00" FLAT
13	606943	2	NT .562-18 HX G5 NL
14	603987	2	PULLEY
15	604123	2	PULLEY SPACER
16	036236	8	CS .312-18 X 1.00 HX G5
17	768523	8	FW .343 X .687 X .051/.080H
18	604251	1	NT .312-18 HX NL JAM G2 ZN
19	122398	1	TENSIONING PULLEY STOP
20	037887	1	CB .312-18 X 1.00 FULL ZN
21	080655	1	CS .375-16 X 1.50 HX G5
22	604254	1	CB .50-13 X 2.50 STD ZN
23	604214	2	SPINDLE ASSEMBLY

NOTES:

1. Torque to 18 ft-lbs.
2. Torque to 75 ft-lbs.
3. Torque to 73 ft-lbs.
4. Torque to 30 ft-lbs. The idler arm must pivot freely.

42" Deck

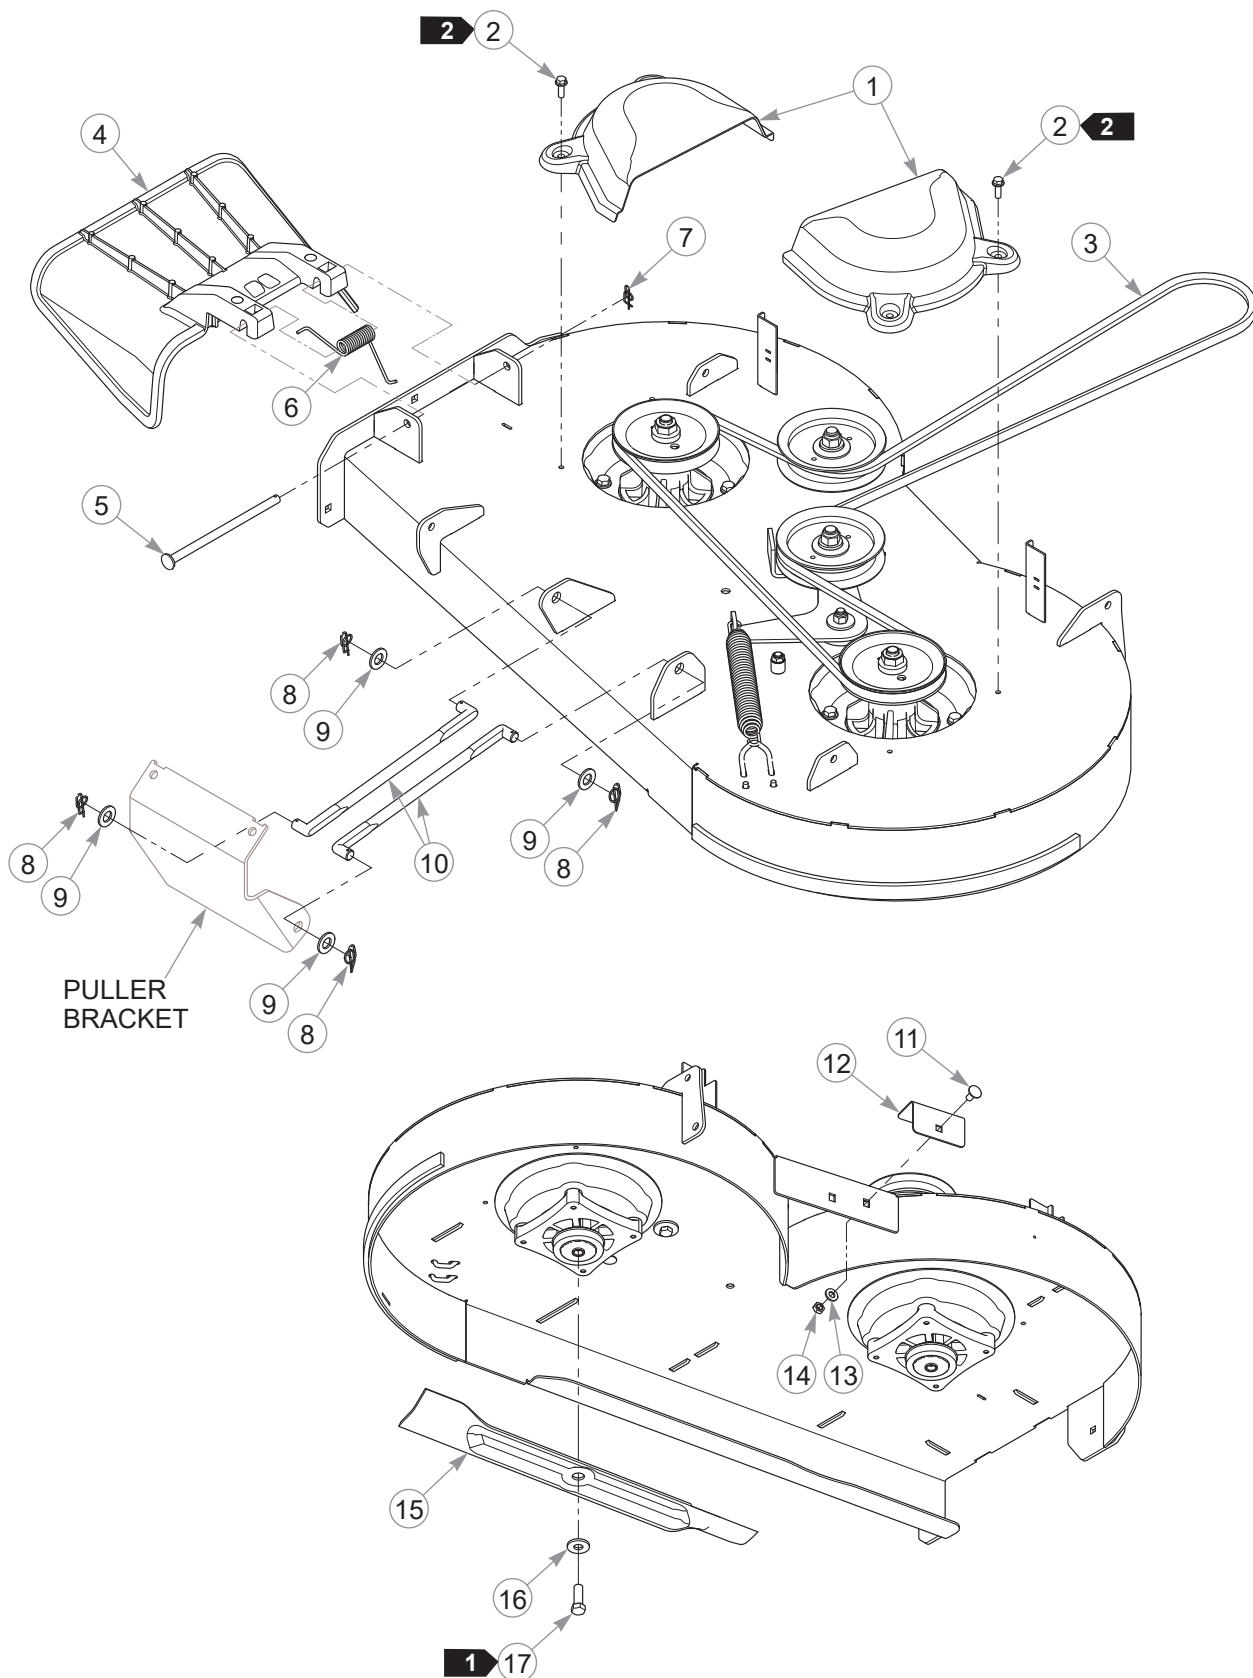


42" Deck

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	604403	2	PULLEY COVER
2	604324	4	CS .250-20 X .75 HX FLG
3	607059	1	BELT, A-SEC
4	607145	1	DISCHARGE CHUTE
5	607157	1	DISCHARGE CHUTE PIN
6	607146	1	CHUTE SPRING
7	607093	1	CP RUE RING .054 X .392
8	607051	4	CP RUE RING .062 X .520
9	004168	4	FW .500 X 1.06 X .090 SAE
10	607016	2	DECK PULLER
11	083147	1	CB .312-18 X .620 G5 ZN
12	607262-4	1	WEAR PLATE
13	768523	1	FW 0.343 SAE
14	604251	1	NT .312-18 HX NL JAM G2 ZN
15	607280	2	BLADE, 20.50" -M-F-CW
16	602680	2	FW .453 X 1.12 X .119 HRD
17	754101	2	NT .312-18 LOW CROWN AC

NOTES:

1. Torque to 48 ft-lbs.
2. Torque to 2–5 ft-lbs on these 2 self-tapping screws.

34/42" Deck Lift

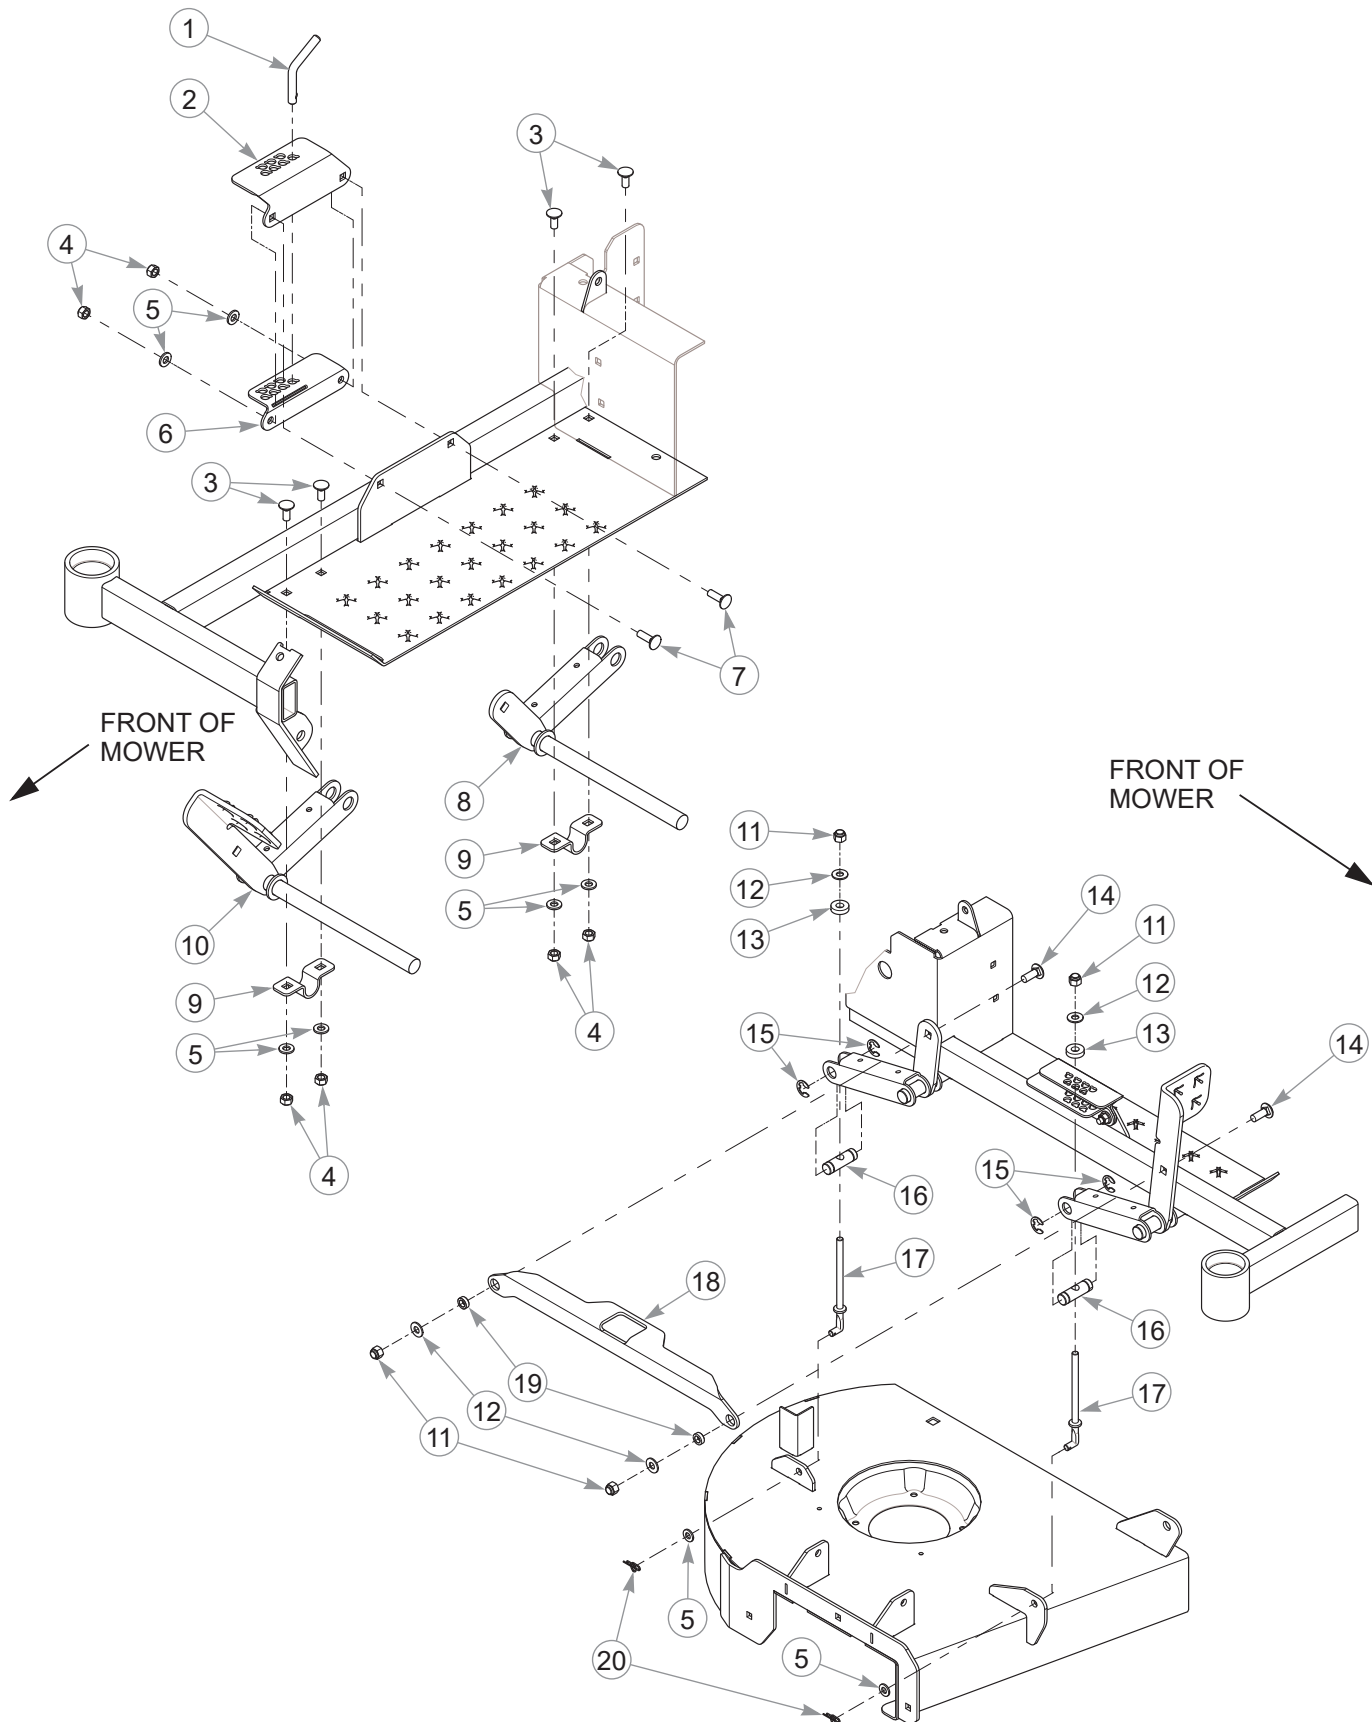


34/42" Deck Lift

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	601963	1	DECK HEIGHT STOP PIN
2	124615-1	1	TOP DECK LIFT BRACKET
3	016253	8	CB .312-18 X .75 FUL ZN
4	058776	10	NT .312-18 HX G5 ZY NL
5	768523	14	FW .343 X .687 X .051/.080H
6	124616-1	1	BOTTOM DECK LIFT BRACKET
7	037887	2	CB .312-18 X 1.00 FULL ZN
8	124630-1	1	REAR DECK LIFT
9	124635-3	4	DECK LIFT STRAP
10	124629-1	1	FRONT DECK LIFT
11	086660	6	NT .375-16 G8 NL
12	767954	6	FW .379 X .813 X .063
13	605114	4	FW .41 X .94 X .25 UHMW
14	025395	2	CB .375-16 X 1.00 G5 ZNY
15	791673	8	E CLIP .625 X .480 X .042 Z
16	118018	4	PIVOT
17	607017	4	DECK HANGER
18	124614-4	1	DECK LIFT LINK
19	601839	2	PIVOT SPACER BUSHING
20	607093	4	CP RUE RING .054 X .392


NOTES:

34/42" Deck Lift

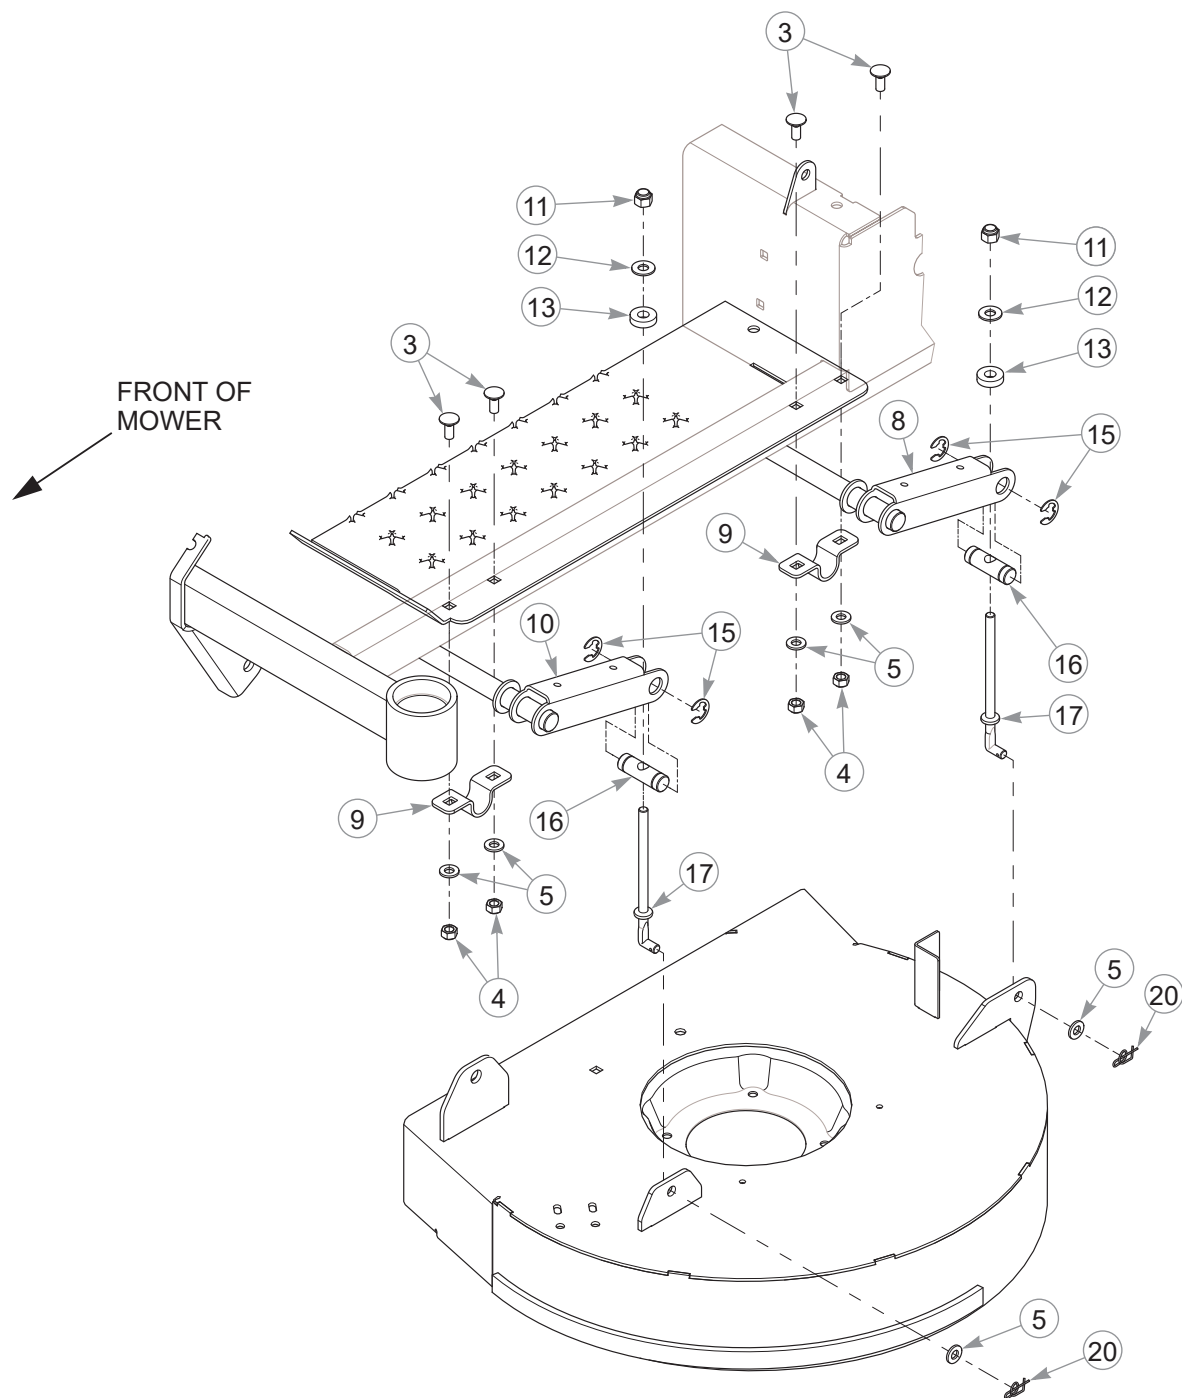

Section 7

Seat 7-2

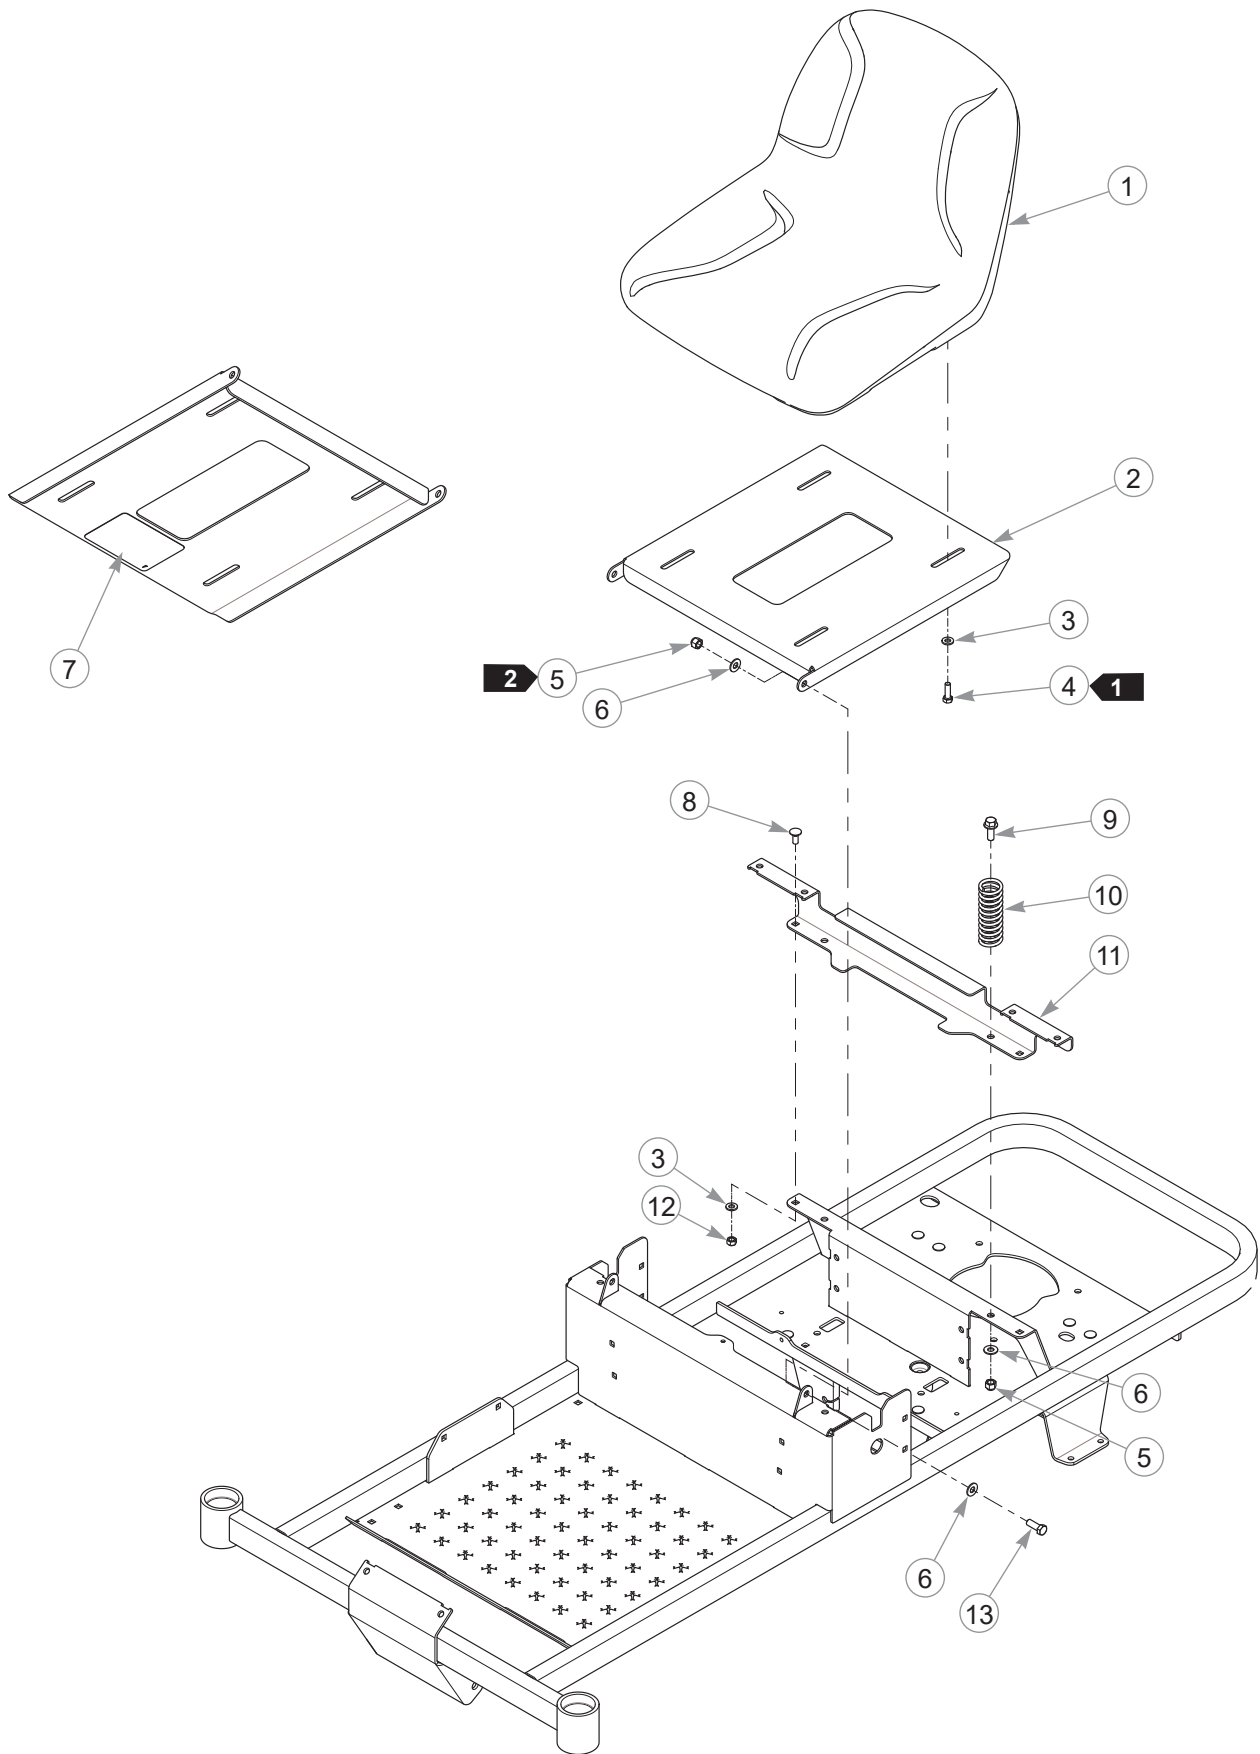

Seat

INDEX NO.	PART NO.	QTY.	DESCRIPTION
1	607083	1	SEAT
2	554825	1	SEAT PAN (WITH DECAL)
3	768523	6	FW .343 X .687 X .051/.080H
4	036236	4	CS .312-18 X 1.00 HX G5
5	086660	4	NT .375-16 G8 NL
6	767954	6	FW .379 X .813 X .063
7	601815	1	BATTERY WARNINGS DECAL
8	016253	2	CB .312-18 X .75 FUL ZN
9	029751	2	CS .375-16 X 1.00 HX FLK
10	793851	2	COMPRESSION SPRING 1.25 X 4.00 X .188
11	124617-1	1	SEAT PAN SUPPORT
12	058776	2	NT .312-18 HX G5 ZY NL
13	036244	2	CS .375-16 X 1.00 HX G5

NOTES:

1. Torque to 7 ft-lbs.
2. Do not torque; the seat pan and seat stop must pivot freely.

